


INSTRUCTION MANUAL REMOTE VALVE LEVER KIT

PART No.	PART NAME	SUITABLE TRACTOR
3B791-9714-0	LEVER, KIT (AUX. CON. VALVE)	M5-091, M5-111
3B791-9710-0	LEVER, KIT (AUX. CON. VALVE)	
3B731-9714-0	LEVER, KIT (2, AUX. CON. VALVE)	M4-061, M4-071
3B731-9710-0	LEVER, KIT (3, AUX. CON. VALVE)	


■ Installation

1. Remove the lever grips (1). (Fig.1)
2. Remove the bolts (3) and the rivets (4). (Fig.2)
3. Remove the switches (2) and disconnect the connector from the main harness. (Fig.1)
4. Completely remove the fender cover RH (A). (Fig.2)

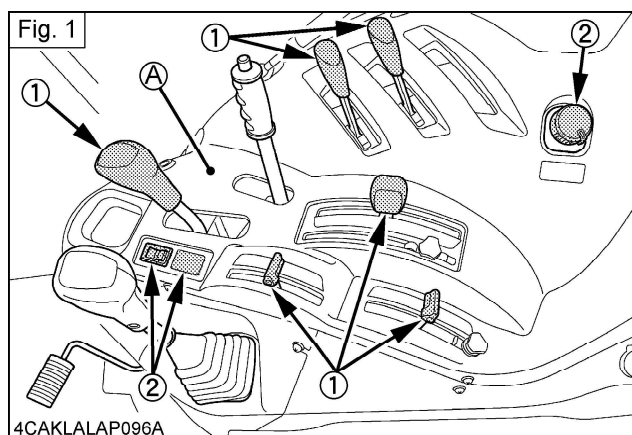

(1) Lever grip
(2) Switch

(A) Fender cover RH

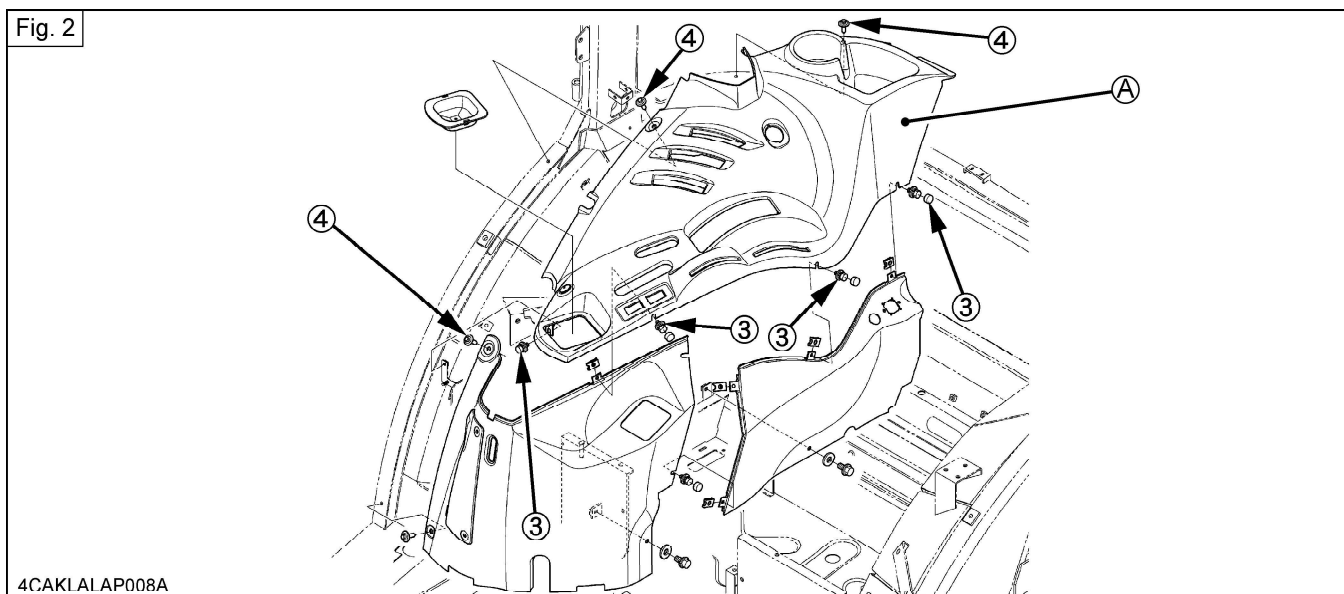

(3) Bolt (M6)

(4) Push rivet

(A) Fender cover RH

5. Install the auxiliary control valve with the stud bolts and the nuts.
6. Fit the control lever (030) and wire (090) to the second-gang or third-gang bracket (aux. lever) (010). (Fig. 6 and 7)
Adjust the threads length of the wire to 5 mm (0.2 in.) from the top of the flange nut (120), and tighten up the flange nut.
The bracket (aux. lever) is at the center position of the threads. (Fig. 4)
7. Attach the second-gang or third-gang bracket (aux. lever) (010) to the CAB frame. (Fig. 6 and 7)
8. Temporarily connect the wire (090) to the Aux. control valve holder (F). (Fig. 6 and 7)