

### [3] ECU AND METER PANEL

#### (1) Engine ECU (B3350 / B3350SU)



#### Checking ECU Connector

1. Disconnect the connector (1), and check their terminals for contamination and deformation.
2. Check to see that cable does not broken or terminals are not shelled off.
3. If any damaged parts are found, repair or replace them.

#### ■ IMPORTANT

- **Connect connectors surely after checked.**

(1) ECU Connector

(2) ECU

9Y1210972ELS0011US0