



Glow Relay

1. Open the bonnet and remove the glow relay (1).
2. Check for continuity across **1** terminal and **4** terminal, and across **2** terminal and **3** terminal.

Resistance	1 terminal – 4 terminal	93 to 113 Ω
	2 terminal – 3 terminal	Not conduct

(1) Glow Relay

[A] B2650

[B] B3350 / B3350SU

9Y1210972ELS0082US0

