




(1) Side Frame

(2) Stand

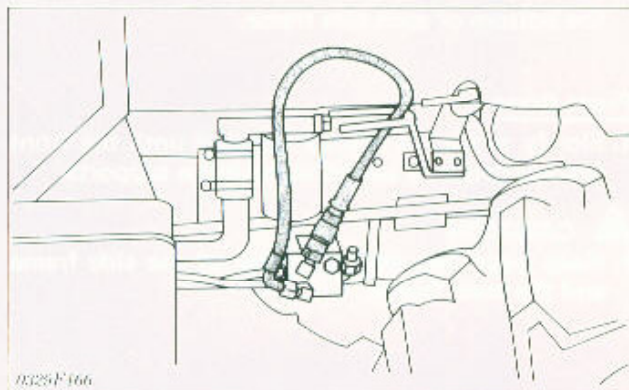

0329F166

Stand

1. Remove the stands which are stored on the left, inside of the front brace.
2. Connect a stand (2) to the bottom of each side frame (1).
3. Secure with snap pins used in storage of connecting bars.

Hose

1. Slowly release all hydraulic pressure by moving the hydraulic control lever in all directions.
2. Disconnect the three hoses with quick couplers at the right side of the tractor.
3. Reconnect the hose remaining on the front hydraulic block to the **OUT** port of the front hydraulic block with quick coupler as shown in the figure.
4. Place a protective cap on the remaining exposed quick coupler ends.

■ IMPORTANT

- When front-end loader is not attached, turn fully the slit on the spool end to the O mark side. (See page M.8-16)

Dismounting Loader

1. Start the engine and slowly back the tractor away from the loader.



0329F190