


## 4. CHECKING, DISASSEMBLING AND SERVICING

### [1] CHECKING AND ADJUSTING

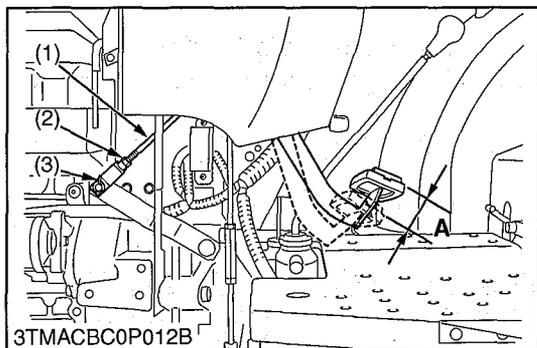

#### Checking Clutch Pedal Free Travel

1. Stop the engine and remove the key.
2. Slightly depress the clutch pedal and measure free travel at top of pedal stroke.
3. If adjustment is needed, loosen the lock nut, remove the cotter pin and adjust the rod length within acceptable limits.
4. Retighten the lock nut (2) and split the cotter pin.

|                          |               |                                    |
|--------------------------|---------------|------------------------------------|
| Clutch pedal free travel | Factory spec. | 20 to 30 mm<br>13/16 to 1-3/16 in. |
|--------------------------|---------------|------------------------------------|

- (1) Clutch Rod
- (2) Lock Nut
- (3) Cotter Pin

**A : Free Travel**

W10123230