

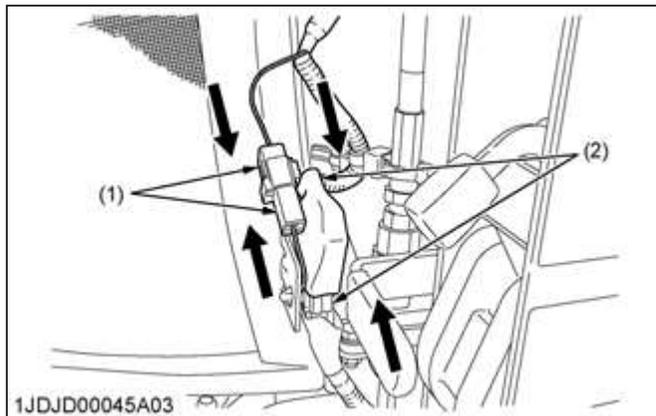
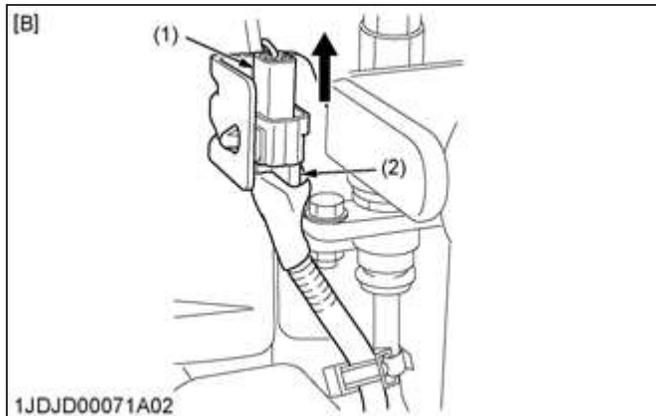


5. When mounting the third-function-kit, remove the caps from the connectors of mobile side and tractor side. Connect the connectors and the caps as shown in the follow figures.

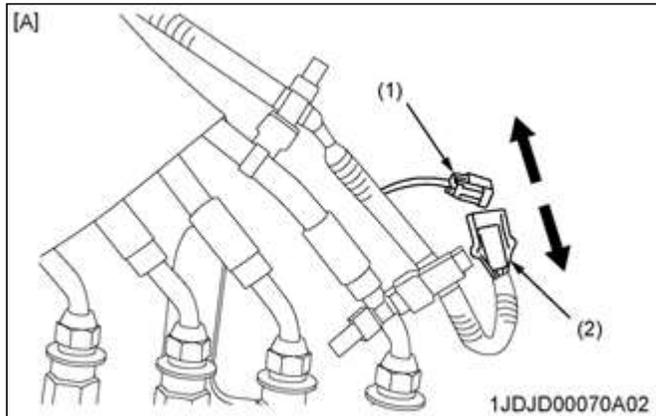

(1) Cap
(2) Connector
[A] Mobile side
[B] Tractor side

6. Make sure that the mounting levers of both sides are at their **low** position as shown in the follow figures.

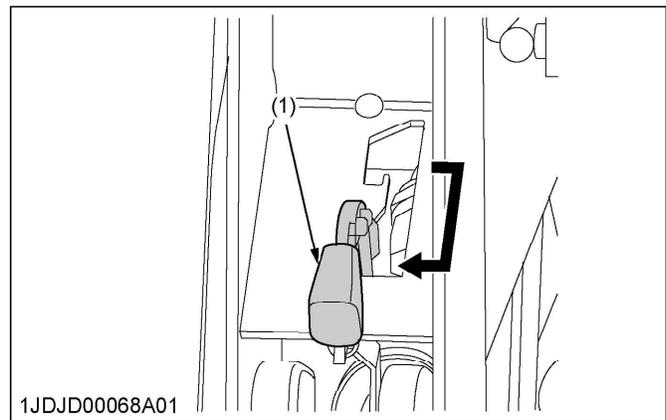


(1) Mounting lever

7. Start the engine and run at the following speed.


Engine speed	1800 rpm
--------------	----------

8. Slowly move the hydraulic-control-lever to the **up** position until the guide bosses of both side frames touch the main frames.

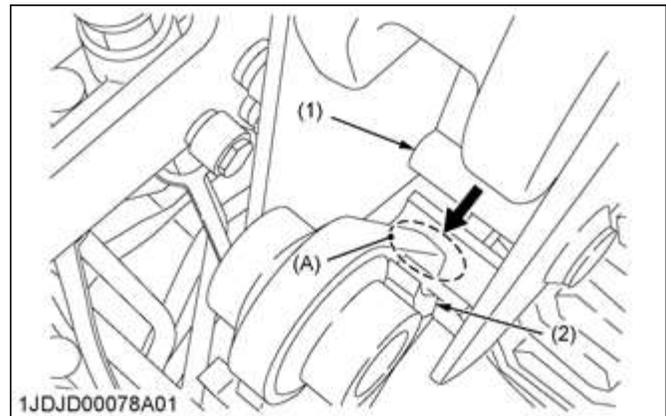

(1) Guide boss of side frame (A) Touch
(2) Main frame

9. Slowly move the hydraulic-control-lever to the **dump** position to lower the side frames into the main frames, and engage the bosses of the main frames to the guide bosses of the side frames.

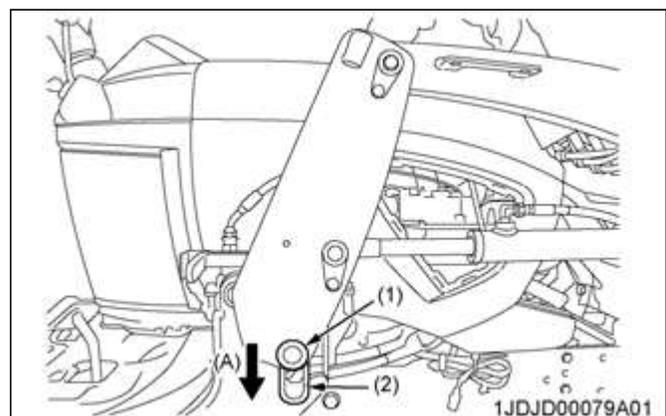

(1) Guide boss of side frame (A) Engage
(2) Boss of main frame