


#### 8.4 STEERING WHEEL


Moderate steering wheel play is 10 to 30mm (25/64 to 1-3/16 in.). To adjust this, loosen the lock nut and turn the adjusting bolt to the right. After adjustment, securely retighten the nut.

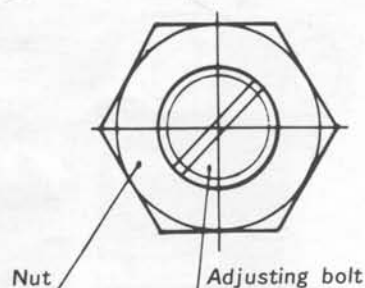

#### 8.5 IMPLEMENT LOWERING SPEED

Implement lowering speed can be adjusted in accordance with the type of the implement and operating conditions. To do this, after loosening the lock nut, tighten or loosen the adjusting bolt on the hydraulic control valve. Tightening the adjusting bolt slows down the lowering speed while loosening it accelerates the speed. After adjustment, securely tighten the lock nut.

Note that the proper lowering speed of a rotary tiller is such that it takes two or three seconds to descend from the top position to the ground.

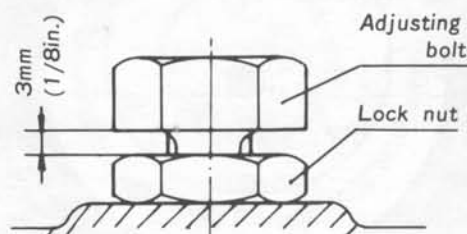

#### 8.6 IMPLEMENT LIFTING AND LOWERING LIMITS

The implement lifting and lowering limits can be changed by shifting the locker (A) or (B).

