


Group 4

Hydraulic Block

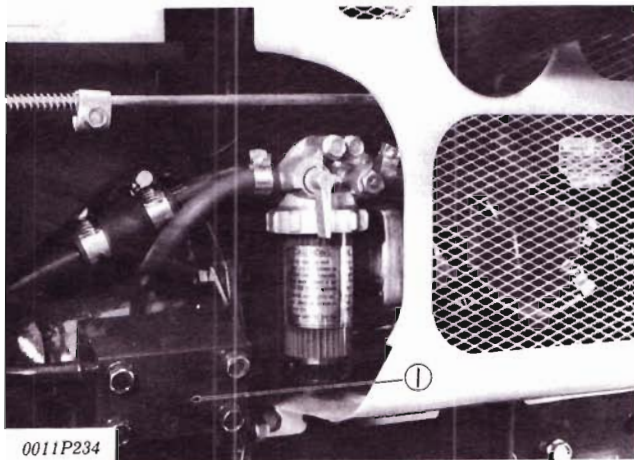


1. Hydraulic Block

Fig. M-46 Hydraulic Block

When hydraulic power is used with the control valve and the three-point linkage and if other hydraulic power is required simultaneously, hydraulic power can be taken off from the hydraulic block integrated with the delivery pipe.

Hydraulic power take-off

- Remove the block cover (2) of the delivery pipe and replace it with the implement hydraulic cover (3).
- Connect the cover front mounting with the delivery pipe (4) which leads to the implement, and connect the rear mounting with the return pipe from the implement.

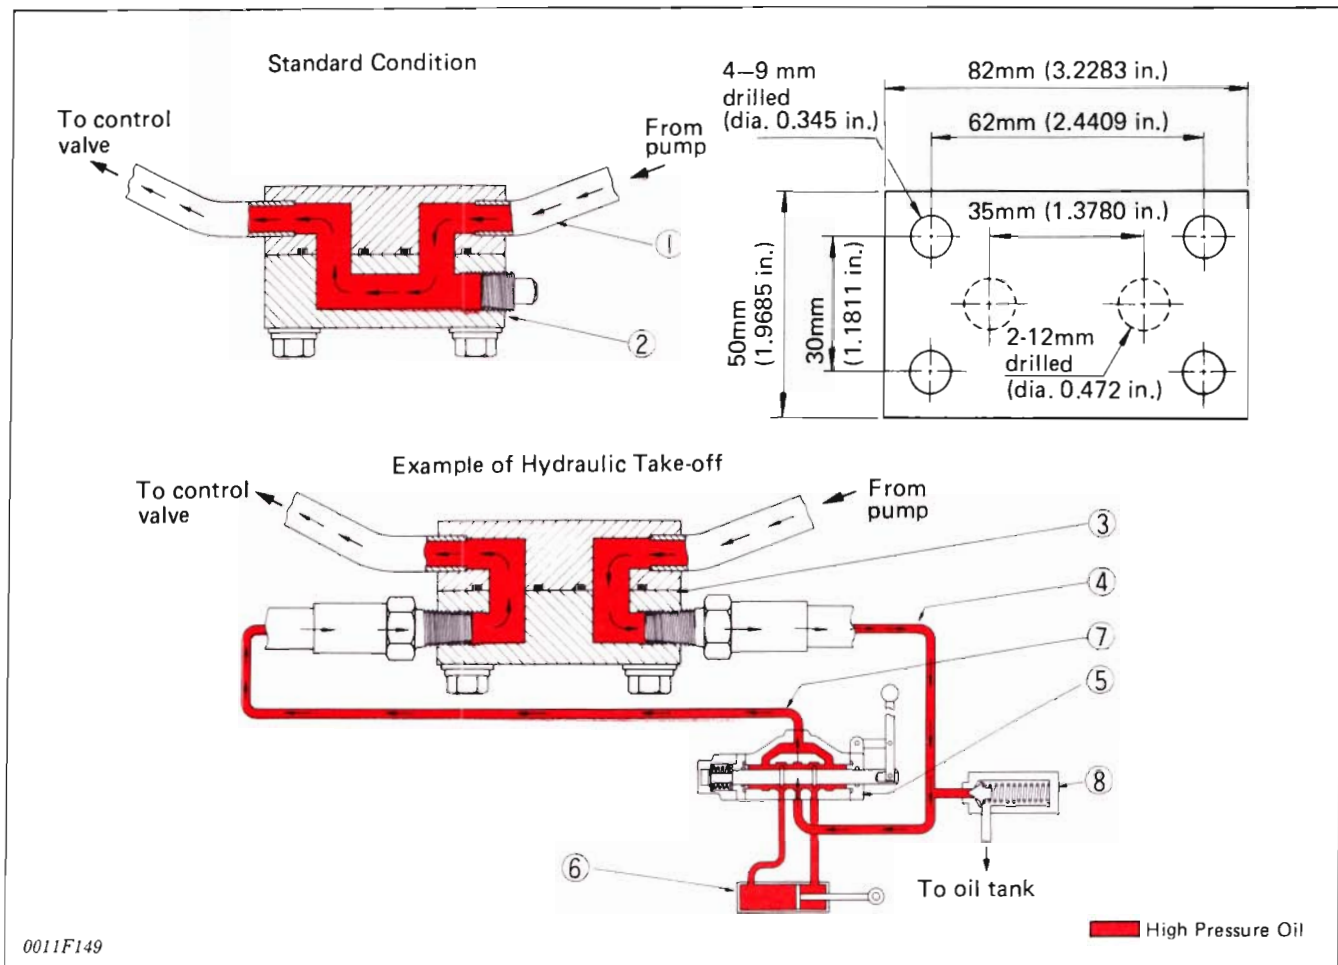

- | | | | |
|--------------------|--------------------------------|-------------------------|-----------------------------|
| 1. Delivery Pipe | 3. Hydraulic Cover (Implement) | 5. Valve (Implement) | 7. Return Hose (Implement) |
| 2. Hydraulic Cover | 4. Delivery Pipe (Implement) | 6. Cylinder (Implement) | 8. Relief Valve (Implement) |

Fig. M-47 Method of Hydraulic Power Take-Off in Hydraulic Block