


## Group 4

# Hydraulic Block

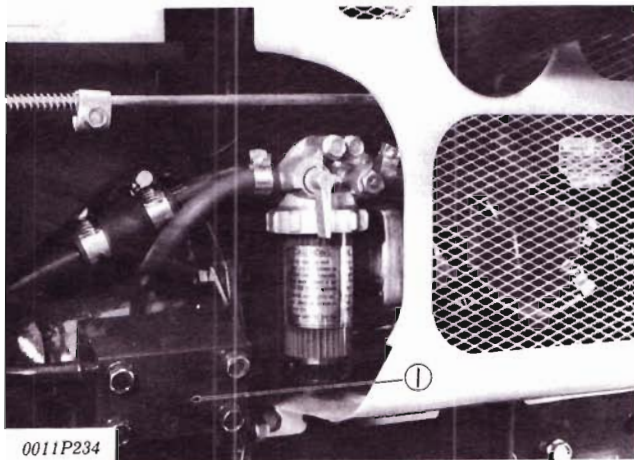


1. Hydraulic Block

Fig. M-46 Hydraulic Block

When hydraulic power is used with the control valve and the three-point linkage and if other hydraulic power is required simultaneously, hydraulic power can be taken off from the hydraulic block integrated with the delivery pipe.

### Hydraulic power take-off

- Remove the block cover (2) of the delivery pipe and replace it with the implement hydraulic cover (3).
- Connect the cover front mounting with the delivery pipe (4) which leads to the implement, and connect the rear mounting with the return pipe from the implement.

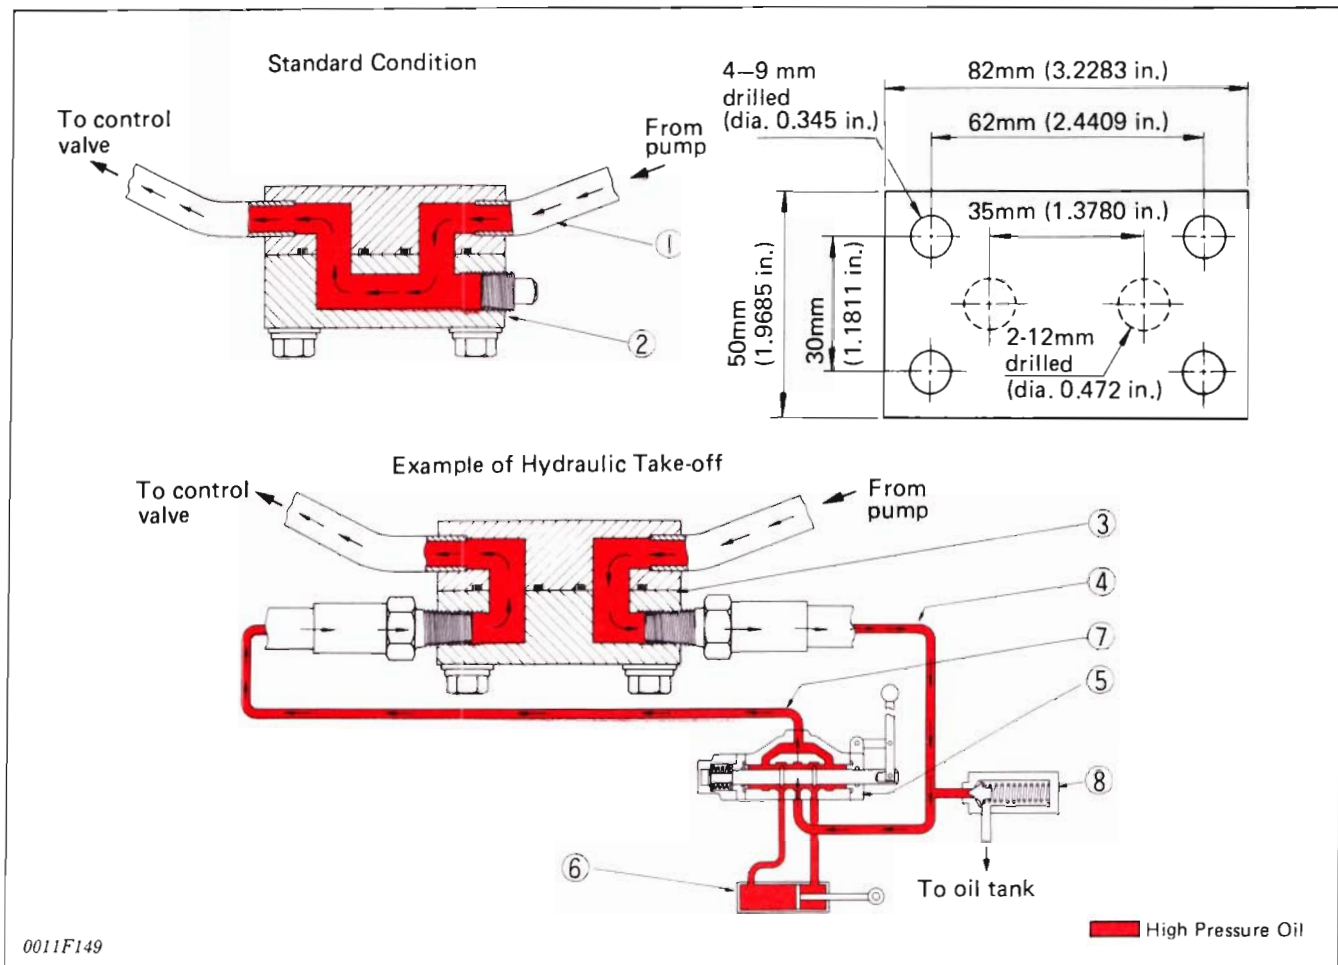

1. Delivery Pipe
2. Hydraulic Cover

3. Hydraulic Cover (Implement)
4. Delivery Pipe (Implement)

5. Valve (Implement)
6. Cylinder (Implement)

7. Return Hose (Implement)
8. Relief Valve (Implement)

Fig. M-47 Method of Hydraulic Power Take-Off in Hydraulic Block