

## ■ Checking Engine Start System



### CAUTION

To avoid personal injury:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test do not operate the tractor.

#### ◆ Preparation before testing.

1. Sit on operator's seat.
2. Set the parking brake and stop the engine.
3. Shift the range gear shift lever to "NEUTRAL" position.
4. Check the speed control pedal "NEUTRAL" position.
5. Shift the PTO clutch lever to "OFF" position.

#### ◆ Test 1: Switch for the speed control pedal

1. Shift the range gear shift lever to "NEUTRAL" position.
2. Depress the speed control pedal.
3. Turn the key to "START" position.
4. The engine must not crank.
5. If it cranks, consult your local KUBOTA Dealer for this service.

#### ◆ Test 2: Switch for the PTO clutch lever


1. Shift the range gear shift lever to "NEUTRAL" position.
2. Check the speed control pedal "NEUTRAL" position.
3. Shift the PTO clutch lever to "ON" position.
4. Turn the key to "START" position.
5. The engine must not crank.
6. If it cranks, consult your local KUBOTA Dealer for this service.

#### ◆ Test 3: Switches for the operator's seat and the speed control pedal

1. Sit on the operator's seat.
2. Shift the range gear shift lever to "NEUTRAL" position.
3. Start the engine.
4. Depress the speed control pedal.
5. Stand up. (Do not get off the machine.)
6. The engine must shut off after approximately 1 second.
7. If it does not stop, consult your local KUBOTA Dealer for this service.

#### ◆ Test 4 : Switches for the operator's seat and the PTO clutch lever.

1. Sit on the operator's seat.
2. Start the engine.
3. Engage the PTO clutch lever.
4. Stand up. (Do not get off the machine.)
5. The engine must shut off after approximately 1 second.
6. If it does not stop, consult your local KUBOTA Dealer for this service.

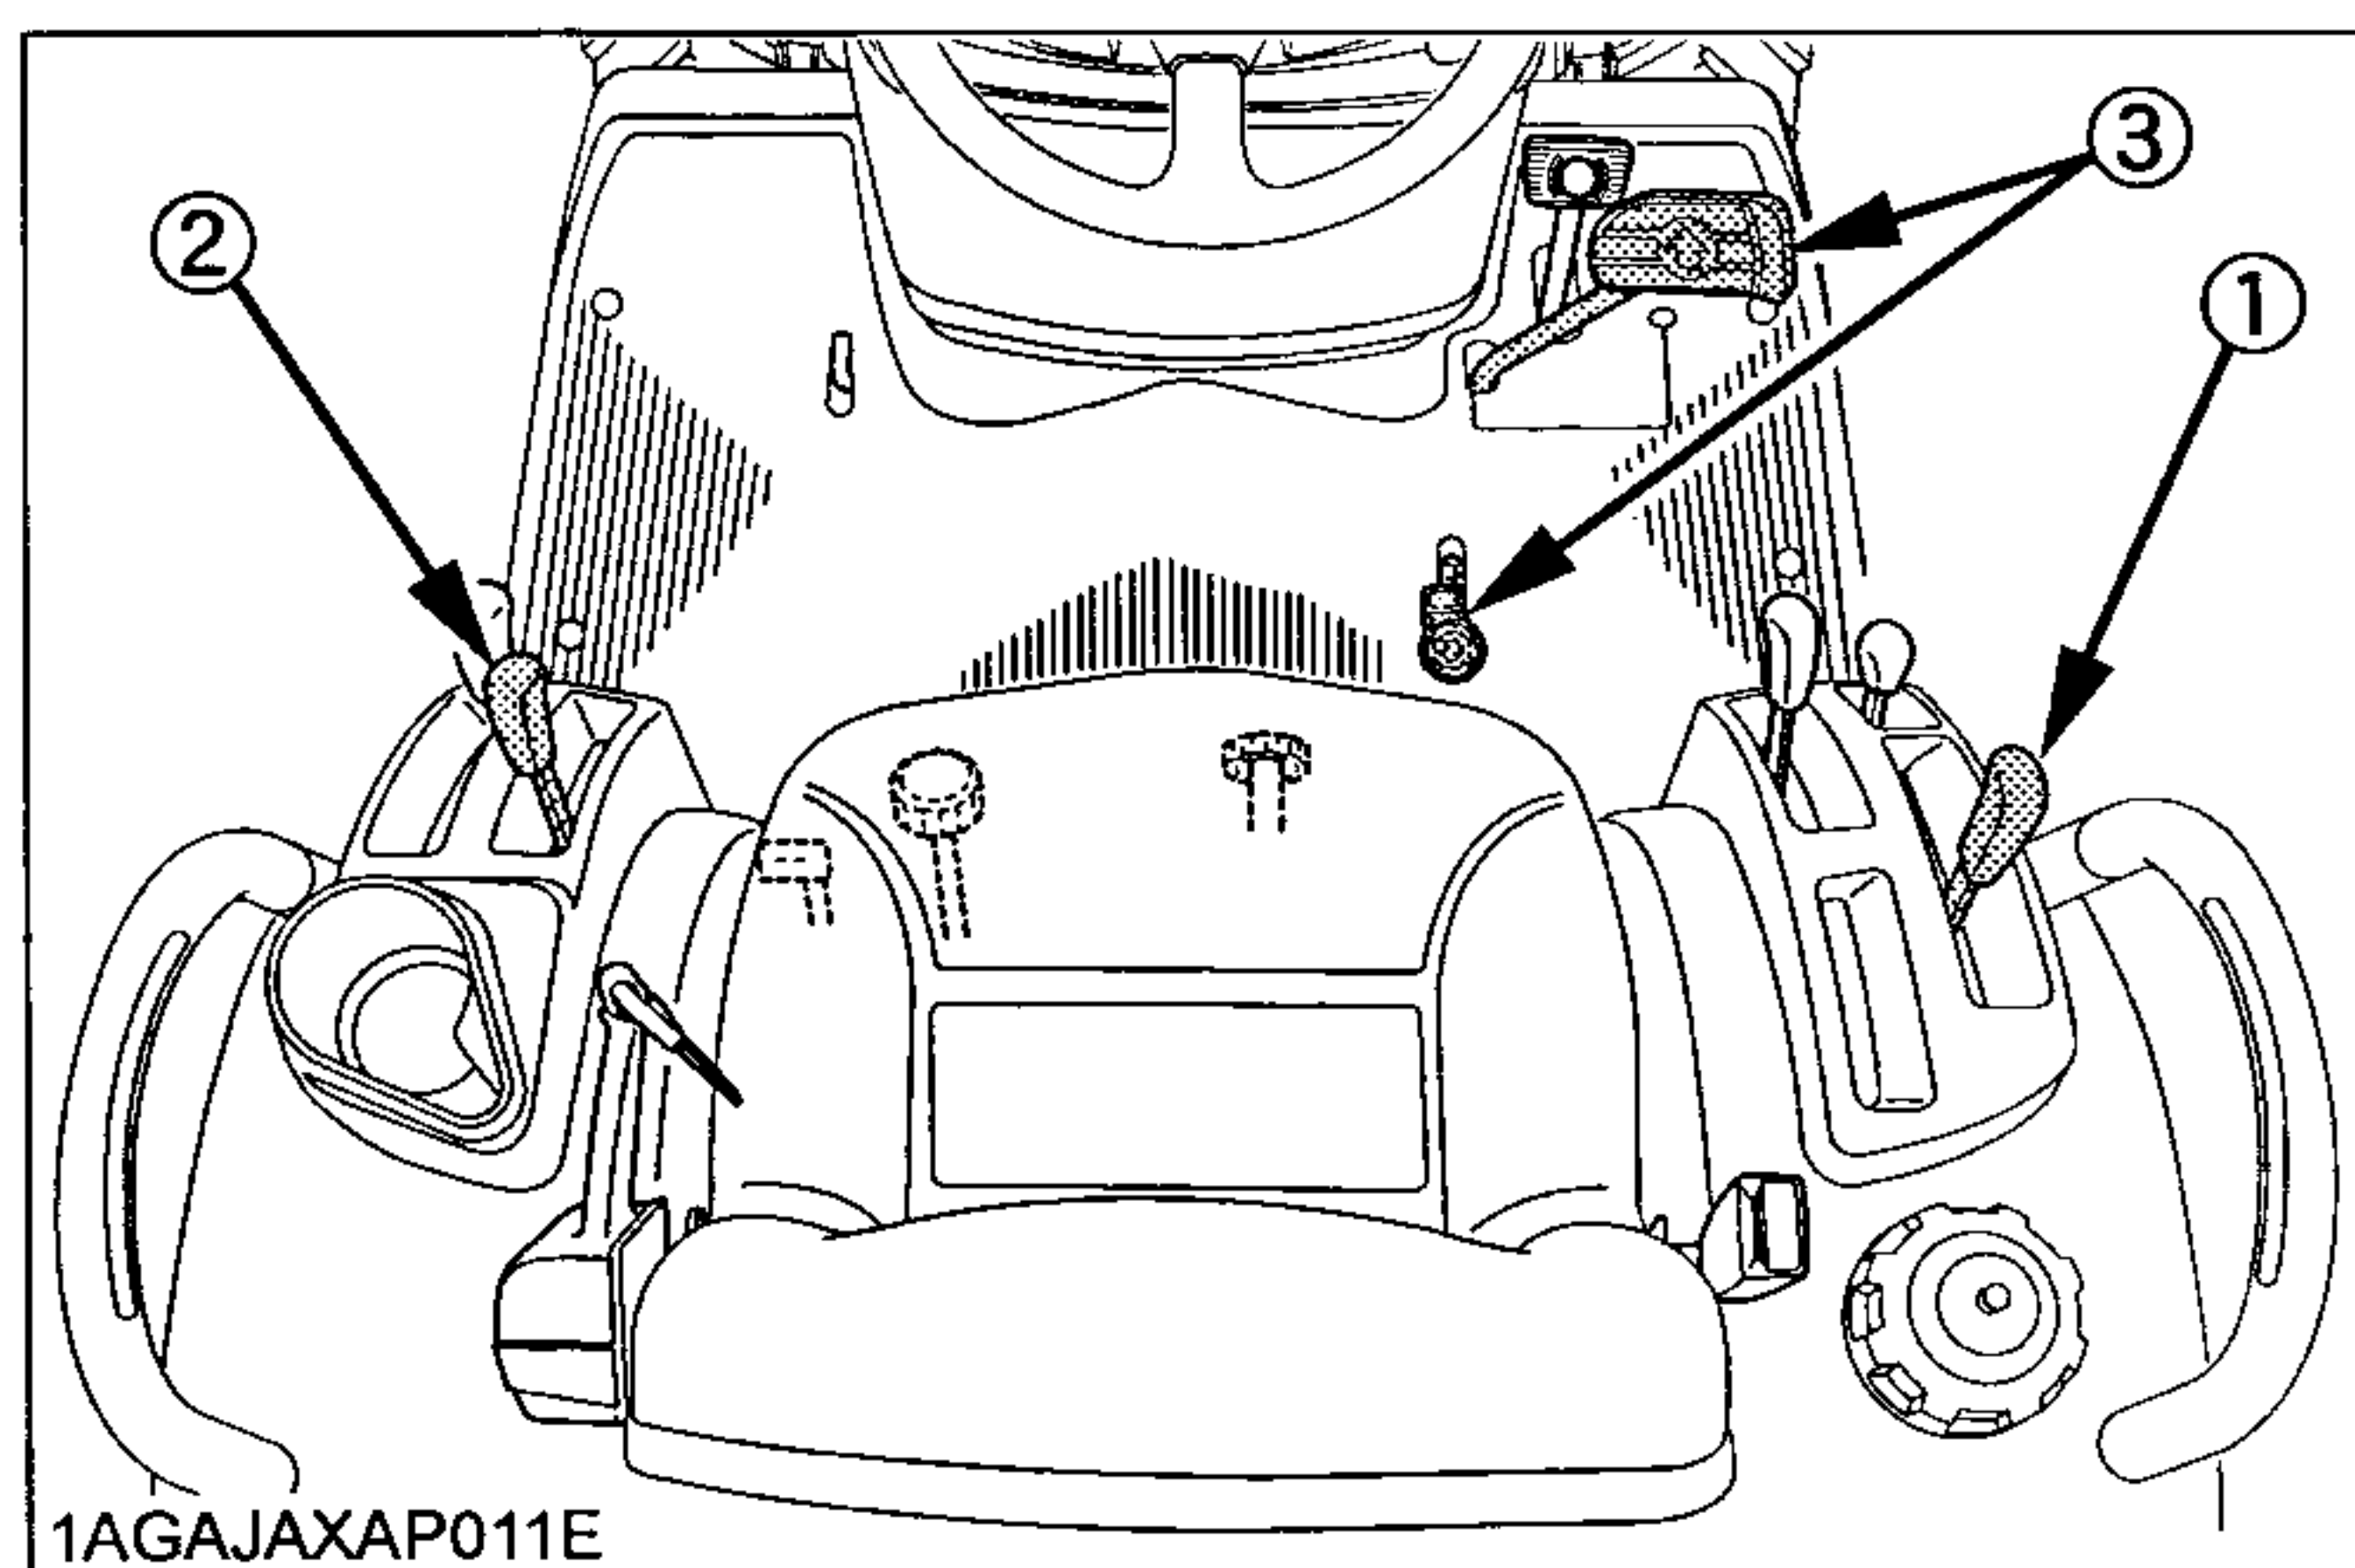

- (1) Range gear shift lever (Hi-Lo)  
 (2) PTO clutch control lever  
 (3) Speed control pedal