


[2] MID AND REAR PTO SECTION

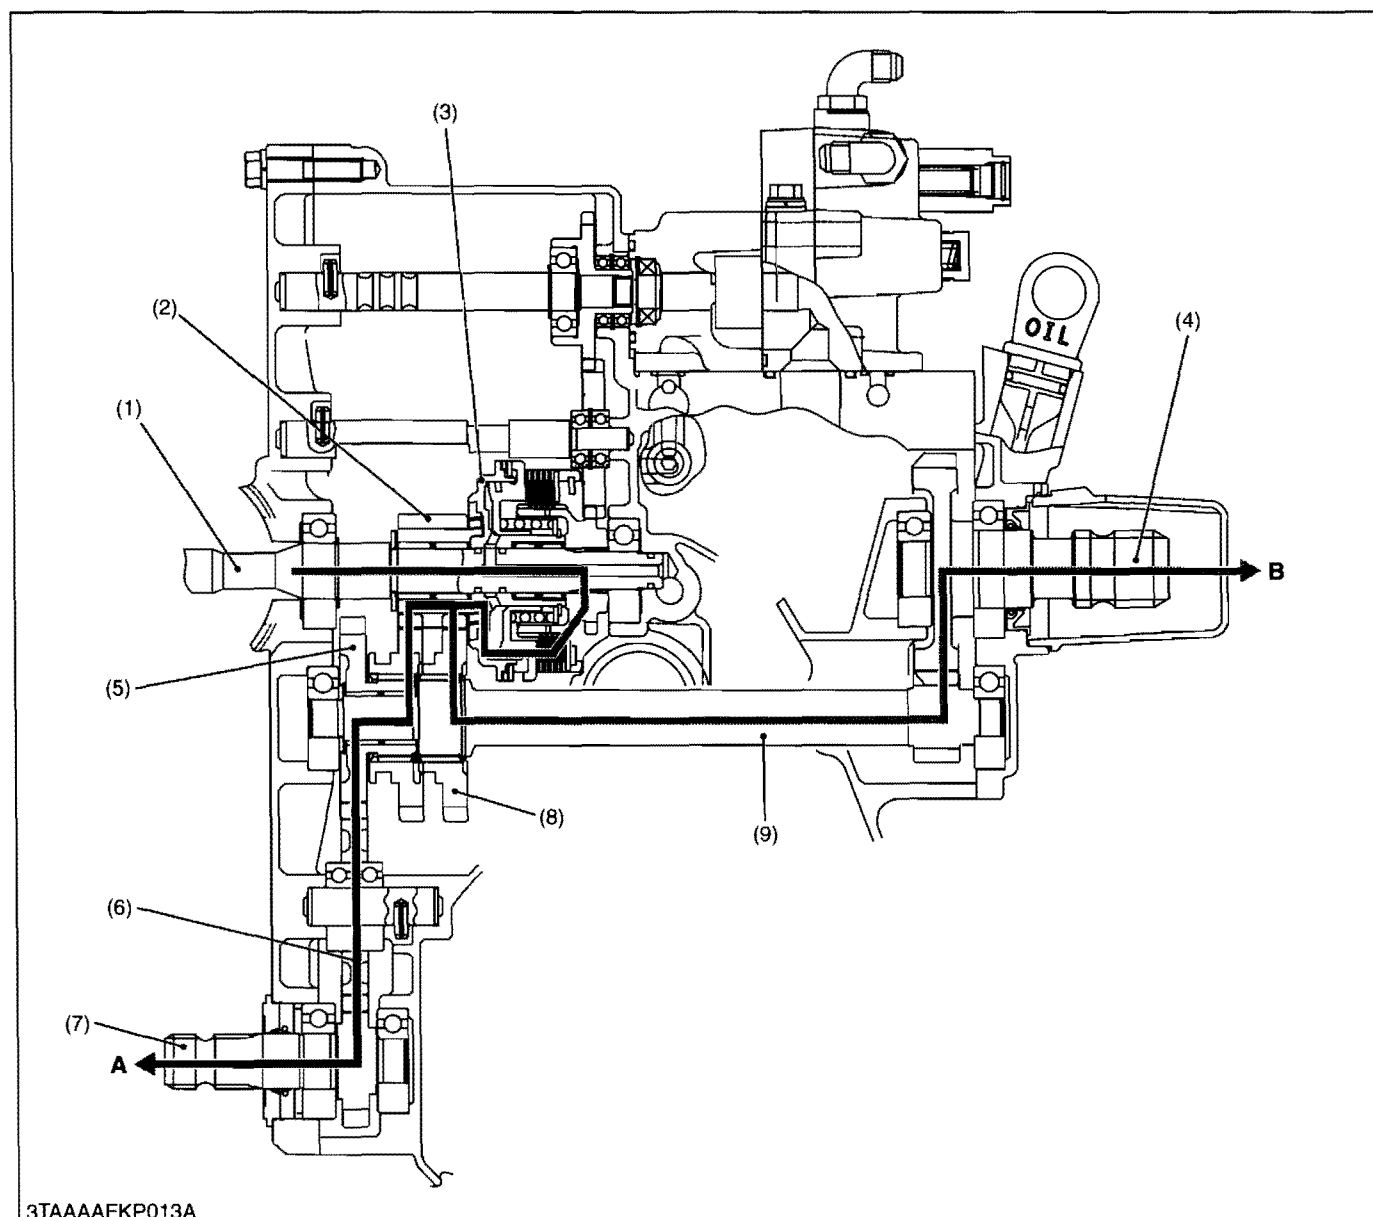

(1) HST Pump Shaft
(2) 12T Clutch Gear
(3) PTO Clutch Pack

(4) Rear PTO Shaft
(5) 23T Mid PTO Gear

(6) 24T Mid PTO Idle Gear
(7) Mid-PTO Shaft

(8) 28T PTO Select Gear
(9) 11T Gear Shaft

Three kinds of power flow are selected by operating the PTO select lever to shift the PTO select gear (8) on the 11T gear shaft (9).

■ Mid-PTO Position (A)

PTO Clutch Pack (3) → 12T Gear Clutch (2) → PTO Select Gear (8) → 23T Mid PTO Gear (5) → 24T Mid PTO Idle Gear (6) → Mid-PTO Shaft (7).

■ Rear PTO Position (B)

PTO Clutch Pack (3) → 12T Gear Clutch (2) → PTO Select Gear (8) → 11T Gear Shaft (9) → Rear PTO Shaft (4).

■ Mid and Rear PTO Position

A and B at the same time.