


3. ENGINE STARTING SYSTEM AND STOPPING

[1] STARTING CIRCUIT

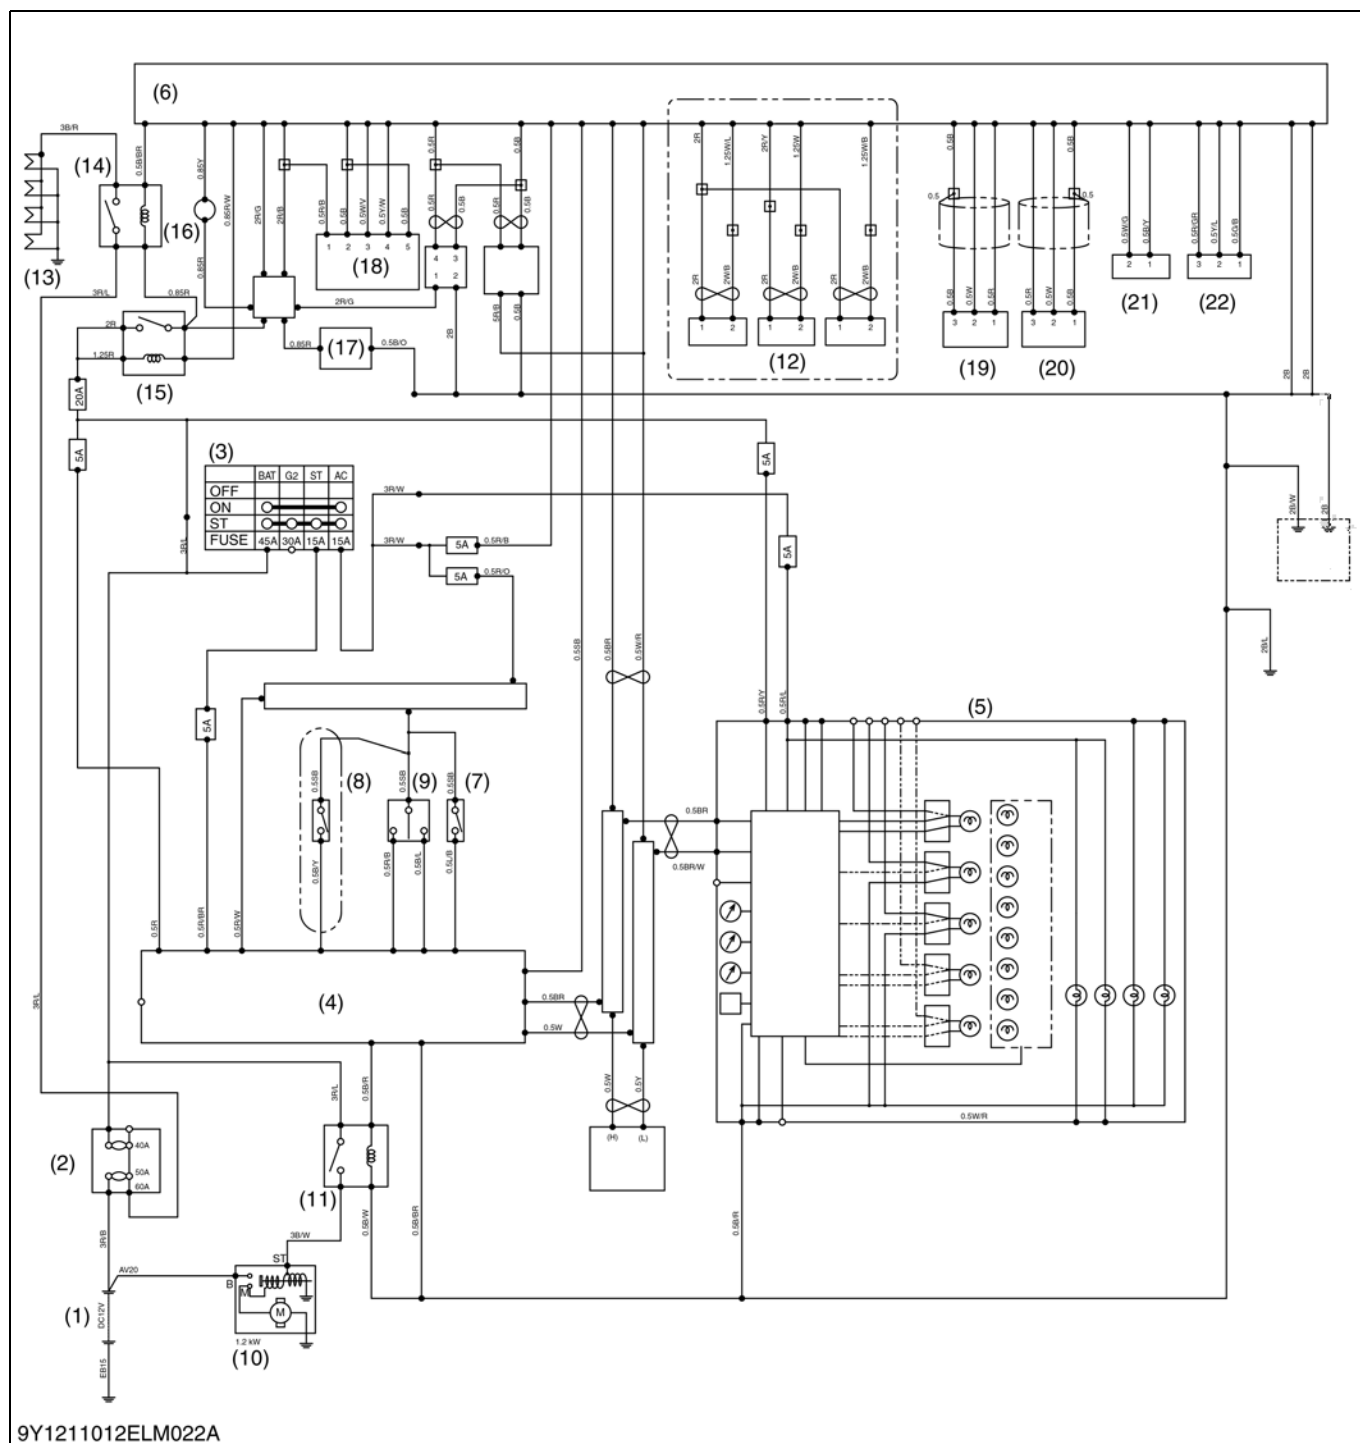

- | | | | |
|----------------------|--------------------------------|--------------------------------|---------------------------------|
| (1) Battery | (7) PTO Switch | (12) Injectors | (18) Air Flow Sensor |
| (2) Slow Blow Fuse | (8) Shuttle Switch / HST Pedal | (13) Glow Plug | (19) Crank Shaft Sensor |
| (3) Key Switch | Switch | (14) Glow Relay | (20) Cam Shaft Sensor |
| (4) Main ECU | (9) Seat Switch | (15) Engine Relay | (21) Coolant Temperature Sensor |
| (5) Instrument Panel | (10) Starter | (16) Supply Pump | (22) Rail Pressure Sensor |
| (6) Engine ECU | (11) Starter Relay | (17) Electromagnetic Fuel Pump | |

9Y1211012ELM0031US0