


[2] DISASSEMBLING AND ASSEMBLING

(1) Control Valve Assembly

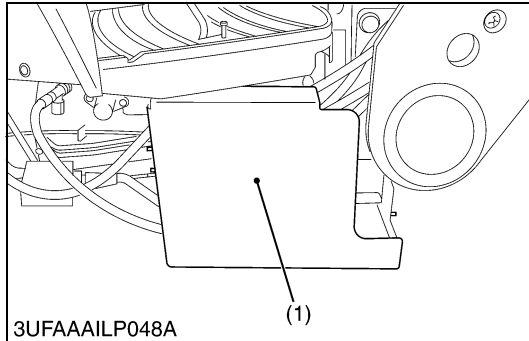

Valve Cover and Cable

1. Remove the valve cover (1).
2. Remove the snap pins (2) and remove the cables (3).

(When reassembling)

- Length L : 30 mm (1.2 in.)

- (1) Valve Cover
(2) Snap Pin
(3) Cable

- (A) LA1153 Standard Valve
(B) LA1353 Standard Valve
(C) Self-leveling Valve

W1013376

