

## (2) Synchro Shuttle Model



### CAUTION

- Park the machine on a firm, flat and level surface, set the parking brake and place the gear shift in neutral.
- Stop the engine and remove the key before checking and adjusting.




### Steering Post Cover

1. Remove the steering post cover (2).

(1) Shuttle Lever

(2) Steering Post Cover

W1010703

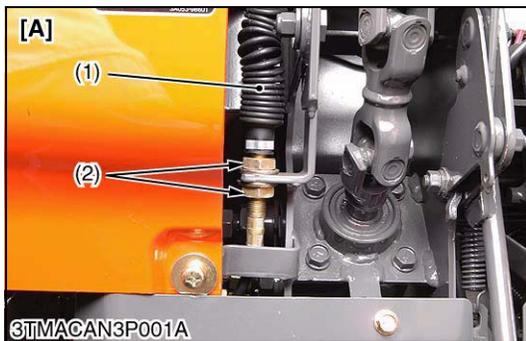

### Shuttle Cable 1

1. The movement of shuttle lever is adjusted shuttle cable retaining nuts of the shuttle cable.


(1) Shuttle Cable



[A] ROPS Model

(2) Retaining Nut

[B] CABIN Model

W1010779

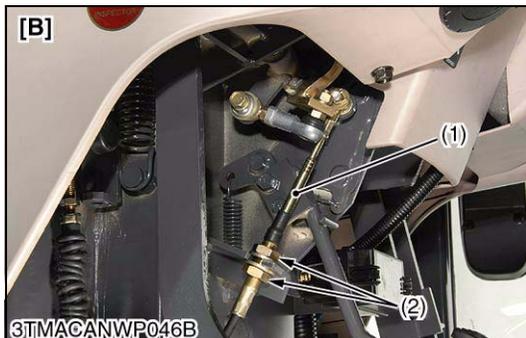

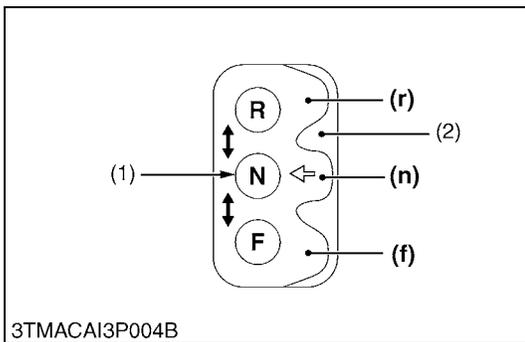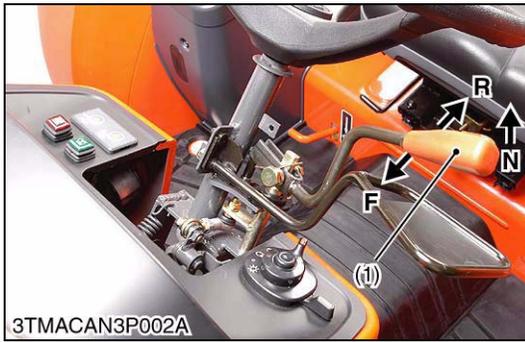

### Adjusting Shuttle Shift Neutral Position and Lever Guide Neutral Position

1. The synchro shuttle shift rod is provided with **F**, **N** and **R** ball detents. (Lift the shuttle lever (1) and slowly move it to the **F** and **R** directions until you feel the lever clicking at the ball detents.)
2. The steering column also has the **f**, **n** and **r** grooves for the shuttle lever.
3. In this adjustment procedure, make alignment between the shuttle valve neutral detent position and shuttle lever guide groove **N**.
4. If the neutral position is incorrect, adjust with cable retaining nuts.

- (1) Shuttle Lever  
 (2) Shuttle Lever Guide

- (f)** Groove F  
**(n)** Groove N  
**(r)** Groove R

**F** : Forward  
**R** : Reverse  
**N** : Neutral

W1010854