




Fuel hose circuit

6. Remove the fuel hose.
7. Remove the band for mounting the fuel tank and then remove the fuel tank.

- (1) Fuel hose (3) Fuel tank  
(2) Fuel tank mounting band

RY9212174MBS0060US0

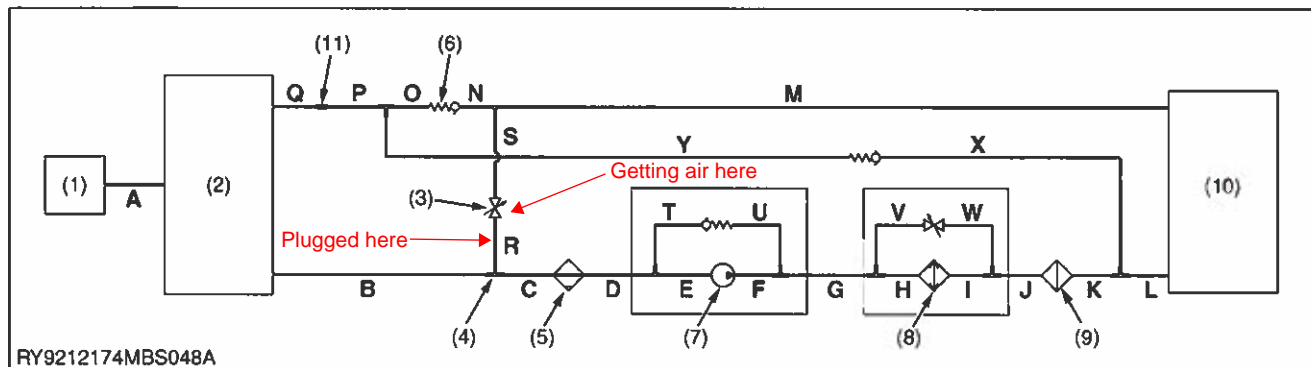

RY9212174MBS048A

- (1) Drain cock (4) T-Joint (7) Fuel pump (10) Engine  
(2) Fuel tank (5) Water separator (8) Fuel cooler (11) Straight pipe joint  
(3) Back-flow valve (6) Check valve (9) Fuel filter

#### NOTE

- (j): Install so the joint in the tube does not come to the edge of the fuel pump.

	Tube		Protective tube			Tube		Protective tube	
	Length	I.D.	Length	I.D.		Length	I.D.	Length	I.D.
A	730 mm 28.7 in.	9 mm 0.4 in.	610 mm 24.0 in.	16 mm 0.6 in.	N	45 x 35 mm 1.8 x 1.4 in.	8 mm 0.31 in.	—	—
B	1650 mm 65.0 in.	8 mm 0.31 in.	1550 mm 61.0 in.	15 mm 0.6 in.	O	280 mm 11.0 in.		250 mm 9.8 in.	15 mm 0.6 in.
C	460 mm 18.1 in.		380 mm 15.0 in.		P	1300 mm 51.2 in.		1200 mm 47.2 in.	15 mm 0.6 in.
D	600 mm 23.6 in.		—	—	Q	35 x 60 mm 1.4 x 2.4 in.		—	—
E	60 mm 2.4 in.		—	—	R	300 mm 11.8 in.		200 mm 7.9 in.	15 mm 0.6 in.
F	35 x 60 mm 1.4 x 2.4 in.		—	—	S	50 mm 2.0 in.		—	—
G	480 mm 18.9 in.		380 mm 15.0 in.	15 mm 0.59 in.	T	35 x 60 mm 1.4 x 2.4 in.		—	—
H	35 x 60 mm 1.4 x 2.4 in.		—	—	U	80 mm 3.15 in.		—	—
I	90 mm 3.5 in.		—	—	V	50 mm 2.0 in.		—	—
J	1800 mm 70.9 in.		1650 mm 65.0 in.	15 mm 0.59 in.	W	150 mm 5.9 in.		—	—
K	50 mm 2.0 in.		100 mm 3.9 in.		X	625 mm 24.6 in.		550 mm 21.7 in.	15 mm 0.6 in.
L	320 mm 12.6 in.	11 mm 0.4 in.	220 mm 8.7 in.	19.5 mm 0.8 in.	Y	50 mm 2.0 in.		—	—
M	70 mm 2.8 in.	8 mm 0.31 in.	—	—					

RY9212174MBS0072US0