

■ Engine Oil Filter Cartridge Change




CAUTION

To avoid personal injury:

- Be sure to stop the engine before changing the oil filter cartridge.

- (1) The oil filter cartridge must be changed every 400 service hours.
- (2) Apply a slight coat of oil onto the cartridge gasket.
- (3) To install the new cartridge, screw it on by hand. Overtightening may cause deformation of the rubber gasket.
- (4) After the new cartridge has been replaced, the engine oil level will normally lower a little. Add engine oil to proper level. Check for oil leaks around filter gasket.

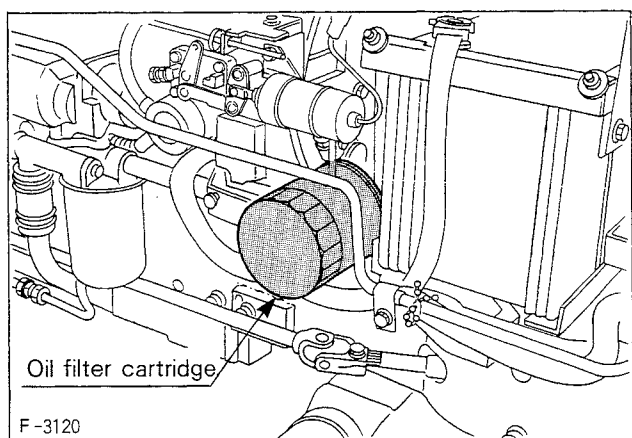

IMPORTANT:

- To prevent serious damage to the engine, replacement element must be highly efficient. Use only a genuine KUBOTA filter or its equivalent.

11.3 TRANSMISSION FLUID



CAUTION

To avoid personal injury:

- Be sure to stop the engine before checking and changing the transmission fluid.

■ Fluid Level Check and Replenishment

View the fluid level through the fluid level gauge.

If low, replenish through the port.

Use multi-grade transmission fluid. (See page 57)

