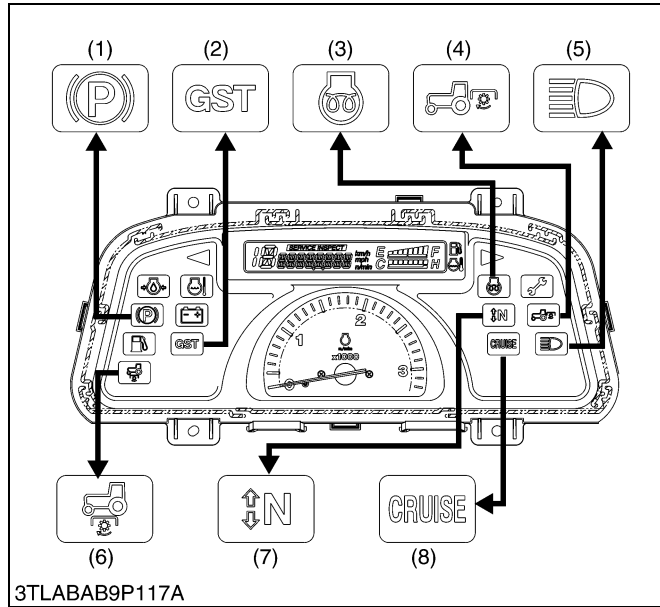


(E) Lamp Control

In this electronic instrument panel, the control of various monitor lamps shown in figure are equipped in addition to warning lamps.

(1) Parking Brake Lamp

If the parking brake is applied, parking brake switch is turned on and monitor lamp will come on.

(2) GST Warning Indicator Lamp (GST Model Only)

If there have electrically problem in GST system, the GST warning indicator lamp will come on.

(3) Glow Indicator Lamp

If the main switch is turned to “ON” position, the glow indicator lamp comes on, and goes off automatically when preheating is completed.

(4) Rear PTO Lamp

If the PTO shift lever is “ON” position, PTO switch is turned on, and monitor lamp will come on.

(5) High Beam Indicator Lamp

If the head light switch is turned to High beam position, the indicator lamp comes on.

(6) Mid PTO Lamp

If the mid PTO shift lever is “ON” position while engaging the PTO, mid PTO lamp will come on.

(7) Shuttle Neutral Lamp

(Manual and GST Model Only)

If the shuttle lever is set a **Neutral** position, this monitor lamp will come on.

(8) Cruise Lamp (HST Model Only)

If the cruise control lever is at speed set position, the cruise lamp will come on.

W1019091