

(3) Electronic Instrument Panel



Disconnecting Electronic Instrument Panel Connector

1. Remove the panel cover (1).
2. Remove the electronic instrument panel (2) from panel frame (3).
3. Disconnect the panel connector (4).

■ NOTE

- When replacing the electronic instrument panel, adjust to mode "B", "C" and mode "J"

- | | |
|--|-----------------|
| (1) Panel Cover | (3) Panel Frame |
| (2) Electronic Instrument Panel (Intellipanel) | (4) Connector |

9Y1210824ELS0009US0

[3] TESTING, SETTING AND ADJUSTING BY ELECTRONIC INSTRUMENT PANEL (INTELLIPANEL)

The following setting, adjustments and testing can be done by using the electronic instrument panel.

- Testing: Check a voltage of various sensor or rotation of engine.
- Setting or Adjustment: Input the various data to electronic instrument panel or main ECU.
- Error information: Check or clear the error information.

9Y1210824ELS0010US0