


Hydraulic Line

1. Remove the cover of the hydraulic block on the tractor.
2. Install the loader hydraulic block to the tractor hydraulic block.
Tightening torque : 23.0 N-m (2.35 kgf-m, 17.0 ft-lbs)

NOTE :


- Make sure install the O-rings at the hydraulic block cover.
- Reuse the bolts fastening the hydraulic block cover.

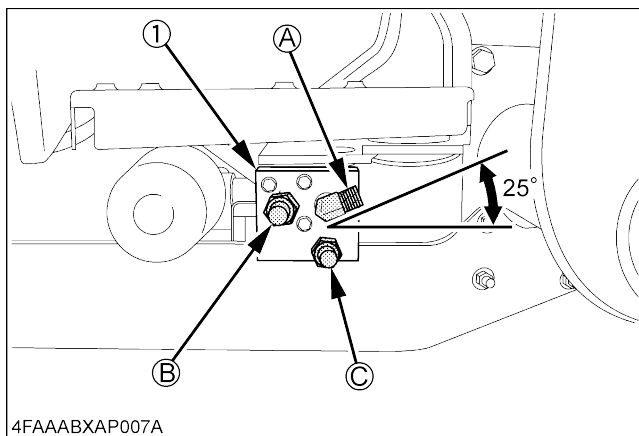

(1) Hydraulic block

(A) Pump port (Orange)
(B) Power beyond port (Green)
(C) Tank port (Gray)



3. Install the control valve assembly to the main frame RH as shown.

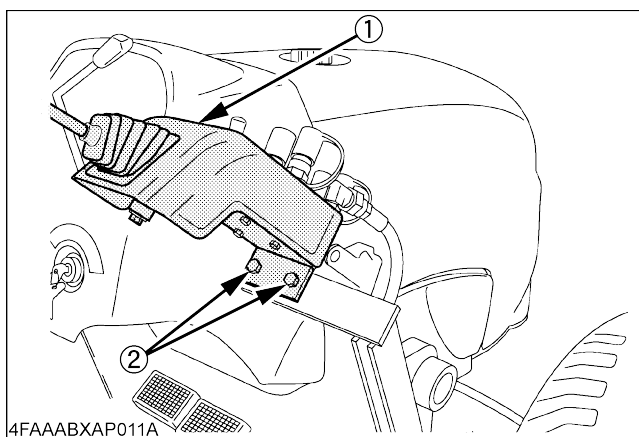

(1) Control valve assembly

(2) 2-M12x30 bolts
2-M12 nuts
2-M12 spring lock washers

4. Connect the hose from pump port on the control valve assembly to pump port on the hydraulic block.
5. Connect the hose from tank port on the control valve assembly to tank port on the hydraulic block.
6. Connect the hose from power beyond port on the control valve assembly to power beyond port on the hydraulic block.

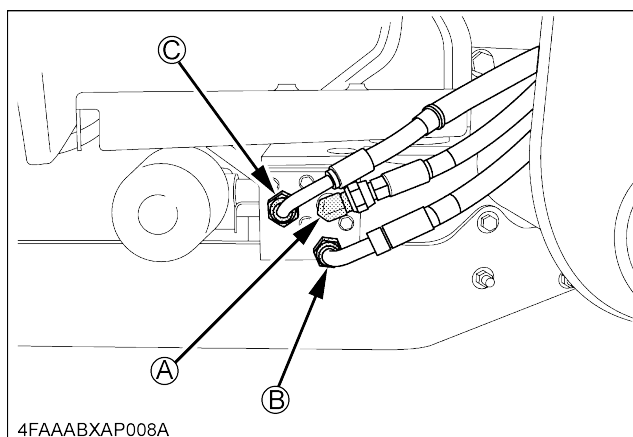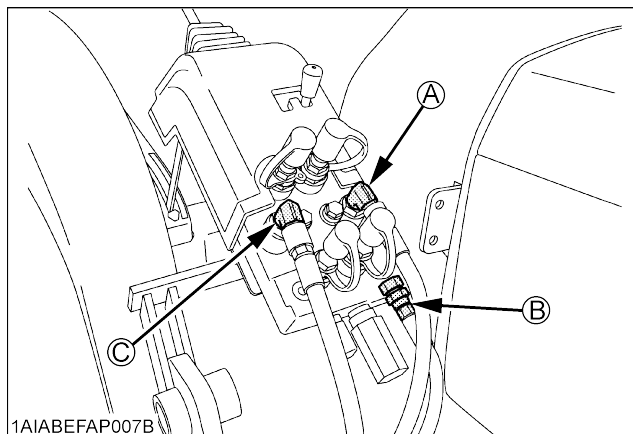

(A) Pump port (Orange)
(B) Tank port (Gray)
(C) Power beyond port (Green)

IMPORTANT :

- Hoses pre-installed on the control valve assembly are not securely tightened to ease installation of hoses to hydraulic block. Be sure to securely tighten all hose fittings after installing.
- Turn the hose fittings so the hoses clear the tractor and tractor parts.