


properly dispose of used oil.

capacity	15 L (4.0 U.S.gals.)
----------	----------------------

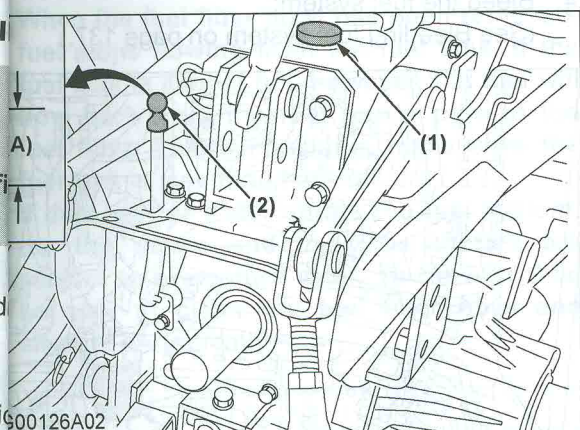


G00126A02

stick
inlet

(A) Oil level is acceptable within this range


[10/LX3310]

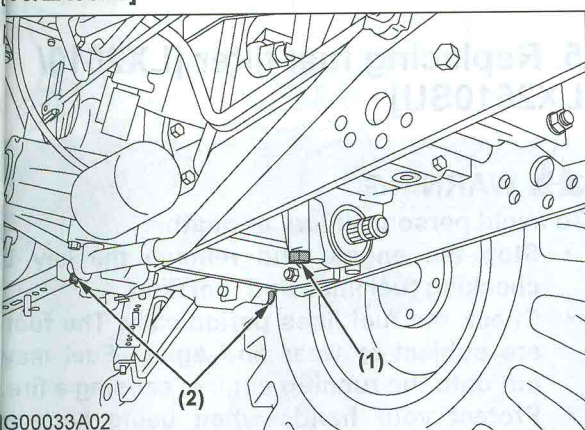

G00033A02

rain plug
rain plugs

[610SU]

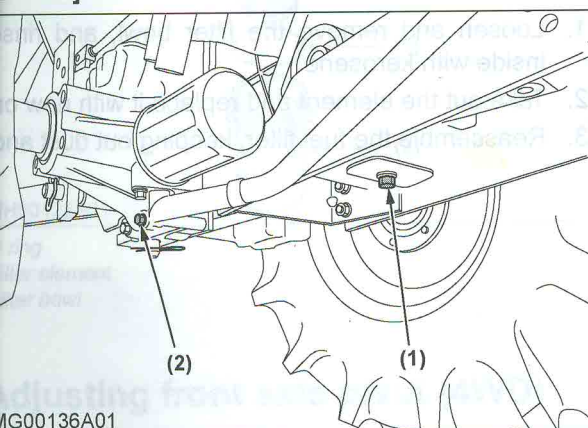

G00136A01

rain plug
rain plug (both sides)

IMPORTANT :

- If the 3-point hitch can not be raised by setting the hydraulic control lever to the UP position after long term storage or when

changing the transmission oil, turn steering wheel to the right and left several times to bleed air from the system.

- Do not operate the tractor immediately after changing the transmission fluid. Run the engine at medium speed for a few minutes to prevent damage to the transmission.

3. Replacing hydraulic oil filter




WARNING

To avoid personal injury or death:

- Be sure to stop the engine before changing the oil filter cartridge.
- Allow the engine to cool down sufficiently; oil can be hot and can burn.

- Remove the drain plugs at the bottom of the transmission case and drain the oil completely into the oil pan.
- After draining reinstall the drain plugs.


[LX2610/LX3310]

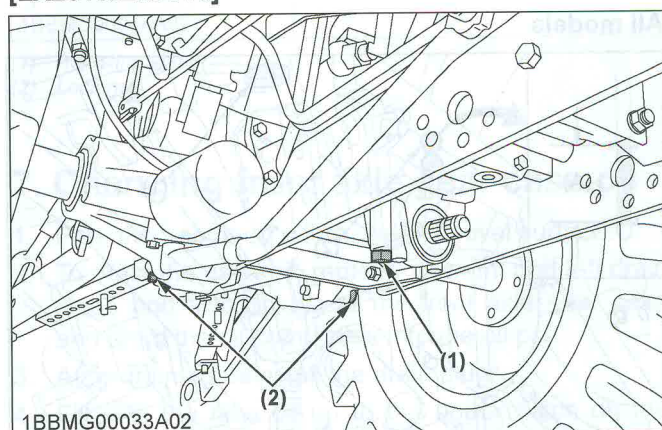

1BBMG00033A02

- (1) Drain plug
(2) Drain plugs

[LX2610SU]

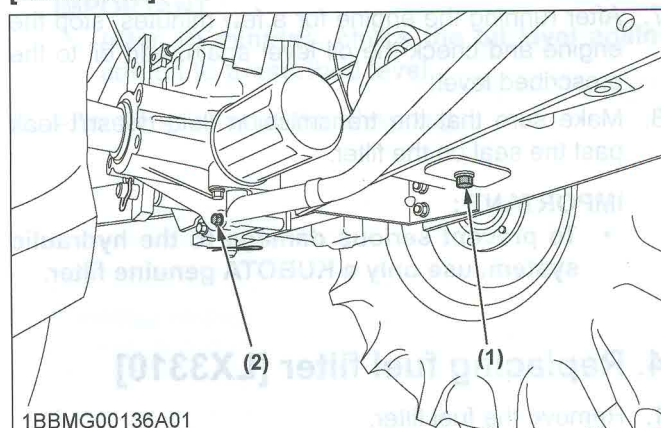

1BBMG00136A01

- (1) Drain plug
(2) Drain plug (both sides)