



Replacing Slow Blow Fuse (CABIN Model)

1. The slow blow fuse are intended to protect the electrical cabling. If any of them has blown out, be sure to pinpoint the cause. Never use any substitute, use only a KUBOTA genuine part.

■ Replacement procedure

Non bolt fixed slow blow fuse:

1. Disconnect the negative cord of the battery.
2. Unscrew the bolt for fuse box (8).
3. Pull out the fuse from the fuse box (8).

Fuse I.D.	Capacity (A)	Protected circuit	Type
(1)	120	Engine preheat	Bolt fixed
(2)	30	Work light	
(3)	30	Electrical outlet	Non bolt fixed
(4)	50	Starter. Air conditioner	
(5)	100	Charge	Bolt fixed
(6)	50	Head lamp. Hazard	
(7)	30	Main key switch	

(8) Fuse Box
(9) Bolt

(10) Bolt Fixed Slow Blow Fuse
(11) Non Bolt Fixed Slow Blow Fuse