


3. STARTING SYSTEM

[1] GST-ROPS MODEL

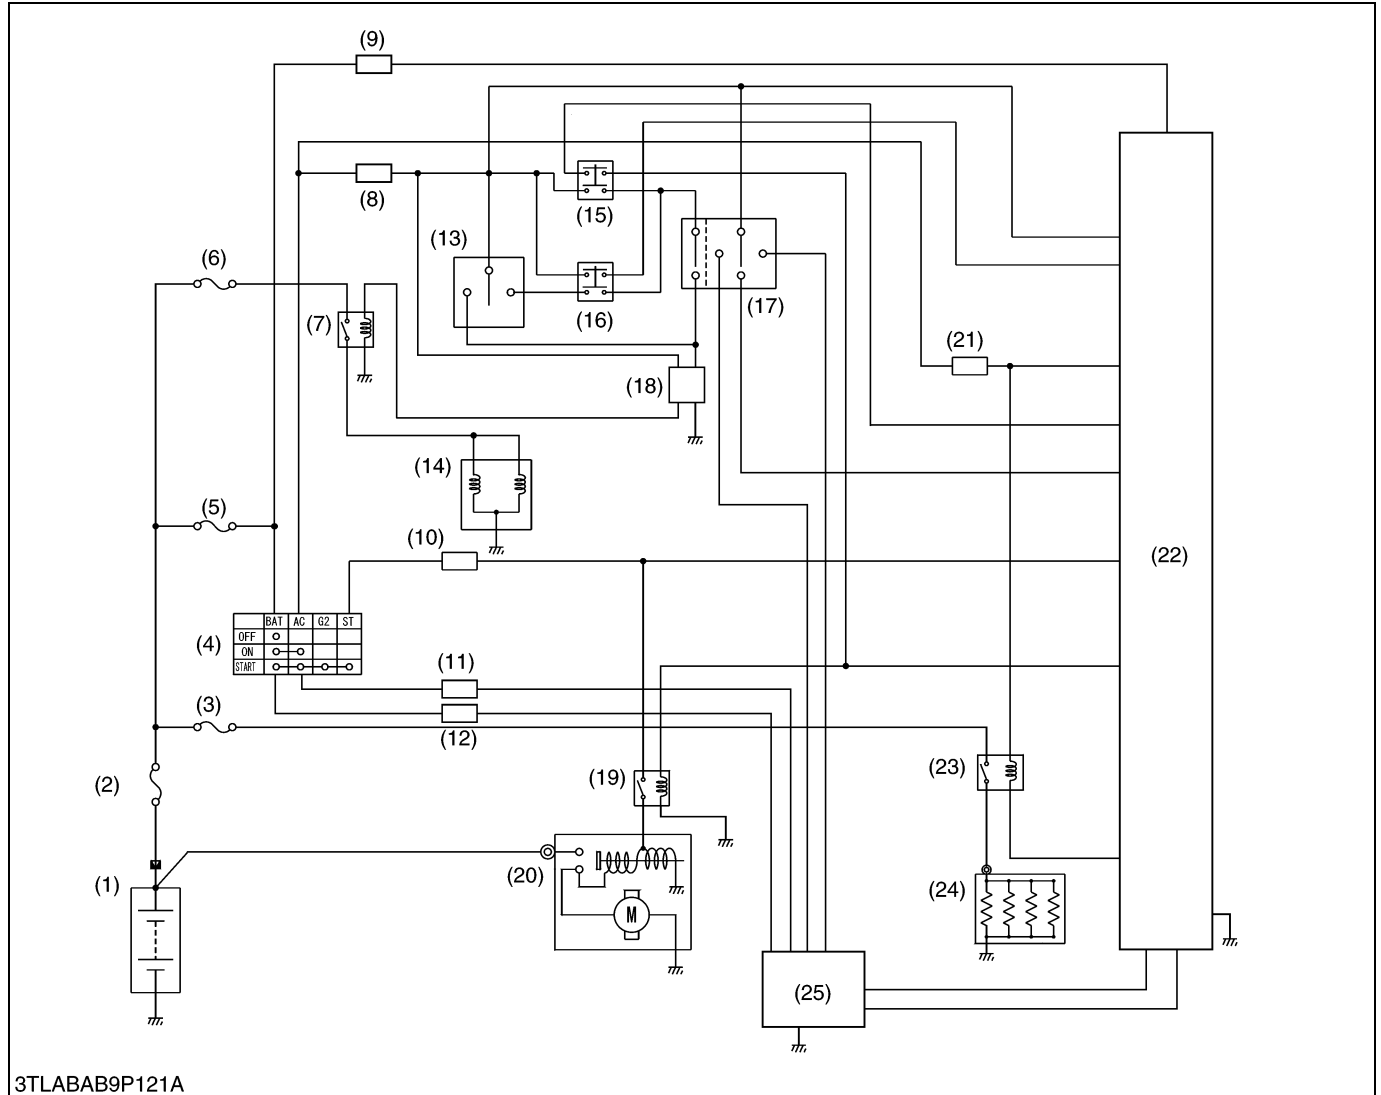

- | | | | |
|-----------------------------|------------------------|---------------------|---|
| (1) Battery | (8) Fuse (5 A) | (15) PTO Switch | (21) Fuse |
| (2) Slow Blow Fuse (50 A) | (9) Fuse (5 A) | (16) Mid PTO Switch | (22) Electronic Instrument Panel (IntelliPanel) |
| (3) Slow Blow Fuse (40 A) | (10) Fuse (30 A) | (17) Shuttle Switch | (23) Glow Relay |
| (4) Main Switch | (11) Fuse (10 A) | (18) OPC Timer | (24) Glow Plug |
| (5) Slow Blow Fuse (50 A) | (12) Fuse (5 A) | (19) Starter Relay | (25) Electric Control Unit (ECU) |
| (6) Slow Blow Fuse (30 A) | (13) Seat Switch | (20) Starter | |
| (7) Key Stop Solenoid Relay | (14) Key Stop Solenoid | | |