

D1803-CR-E4, V2403-CR-E4, V2403-CR-TE4, DM

COMMON RAIL SYSTEM

Name		Battery voltage abnormality	
ISO 14229 P-Code		P0562	P0563
J1939-73	SPN	168	168
	FMI	4	3
SPN Name SAE J1939 Table C1		Battery Potential / Power Input 1	Battery Potential / Power Input 1
DTC Name		Battery voltage: Low	Battery voltage: High
Detection item		<ul style="list-style-type: none"> <li>• Open circuit, short circuit or damage of harness</li> <li>• Failure of battery</li> </ul>	<ul style="list-style-type: none"> <li>• Open circuit, short circuit or damage of harness</li> <li>• Failure of battery</li> </ul>
DTC Set Preconditions		<ul style="list-style-type: none"> <li>• Key switch is ON</li> <li>• Starter Switch signal is not activated</li> </ul>	<ul style="list-style-type: none"> <li>• Key switch is ON</li> <li>• Starter Switch signal is not activated</li> </ul>
DTC set parameter		<ul style="list-style-type: none"> <li>• ECU recognition of battery voltage is below 8 V in 12 V system</li> <li>• Not monitored during cranking</li> </ul>	<ul style="list-style-type: none"> <li>• ECU recognition of battery voltage is above 16 V in 12 V system</li> </ul>
Time to action or number of error detection		<ul style="list-style-type: none"> <li>• 1 sec. or more</li> </ul>	<ul style="list-style-type: none"> <li>• 1 sec. or more</li> </ul>
Limp Home Action by engine ECU (system action)		<ul style="list-style-type: none"> <li>• Output limitation: Approximately 75 % of normal condition</li> <li>• EGR stop</li> <li>• Intake throttle full open</li> </ul>	<ul style="list-style-type: none"> <li>• Output limitation: Approximately 75 % of normal condition</li> <li>• EGR stop</li> <li>• Intake throttle full open</li> </ul>
Behaviour During Malfunction		<ul style="list-style-type: none"> <li>• Faulty starting</li> <li>• Insufficient output</li> <li>• Worsening exhaust gas performance</li> <li>• Engine stops in some case</li> </ul>	<ul style="list-style-type: none"> <li>• Faulty starting</li> <li>• Insufficient output</li> <li>• Worsening exhaust gas performance</li> </ul>
Engine Warning Light		<ul style="list-style-type: none"> <li>• ON</li> </ul>	<ul style="list-style-type: none"> <li>• ON</li> </ul>
Recovery from error		<ul style="list-style-type: none"> <li>• Diagnostic counter = zero</li> </ul>	<ul style="list-style-type: none"> <li>• Key switch turn OFF</li> </ul>
Delay time for recovery		<ul style="list-style-type: none"> <li>• 30 sec.</li> </ul>	—
Remark			

9Y1200242CRS0151US0