


## [3] SEPARATING FRONT AXLE

### [3]-1 DRAINING FRONT AXLE CASE OIL [4WD TYPE]

- Drain front axle case oil. (See page S.S-4)


### [3]-2 REMOVING PROPELLER SHAFT [4WD TYPE]

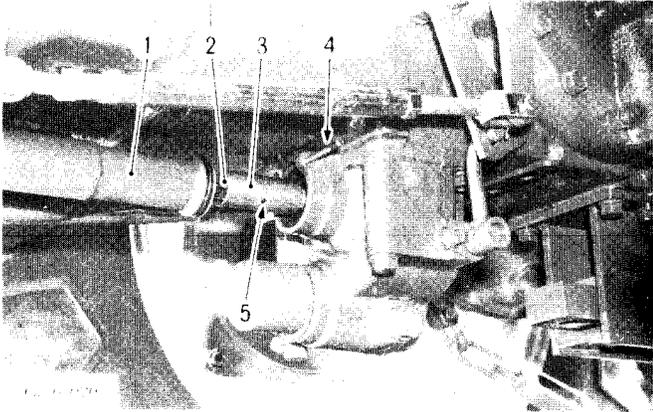

- |                           |                |
|---------------------------|----------------|
| (1) Propeller Shaft Cover | (4) Spring Pin |
| (2) Propeller Shaft Rear  | (5) Spring Pin |
| (3) Coupling              |                |

#### Propeller Shaft Rear

1. Tap out the spring pin (4).
2. Slide the propeller shaft cover (1) to the front.
3. Tap out the spring pin (5).
4. Slide the coupling (3) to the front.
5. Remove the propeller shaft cover (1) mounting screws.
6. Pull out the propeller shaft rear (2) to the rear pressing it downward.

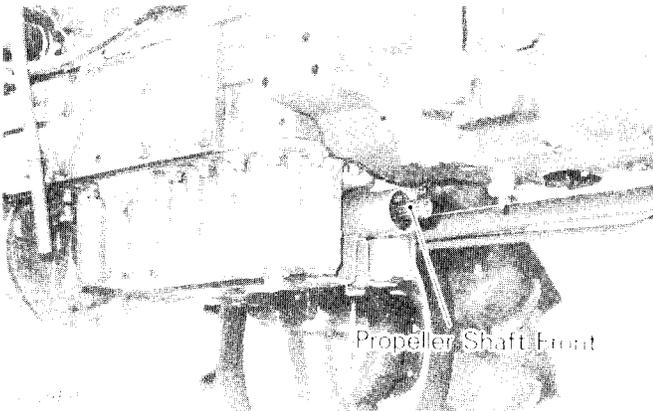

#### Propeller Shaft Front

1. Pull out the propeller shaft front to the rear.