


### Hydrostatic transmission [T1570]

The hydrostatic transmission oil should be between 1.6 and 1.25" from the top of the housing. It may be checked by removing the breather tube fitting.

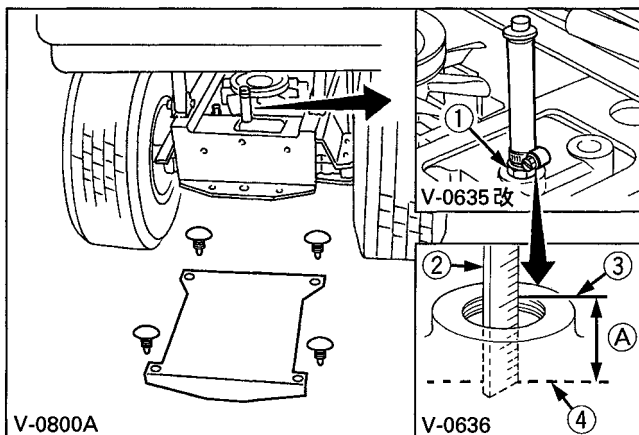

- (1) Breather tube fitting
- (2) Ruler
- (3) Top of housing
- (4) Oil surface

(A) Between 1.6 and 1.25"

### Hydrostatic transmission [T1670, T1770, T1870]

Checking oil level: Be sure to check the oil level when the transmission is cold. Remove the fluid level port plug. The correct level should be even with the bottom of the port. If necessary to add oil, remove breather tube and add from fluid fill/drain port. Be sure to use correct oil which is specified in the above LUBRICANTS table.

