


CHECKING, DISASSEMBLING AND SERVICING


[1] CONTROL VALVE CHECKING AND ADJUSTING

LA271 • LA301 • LA351

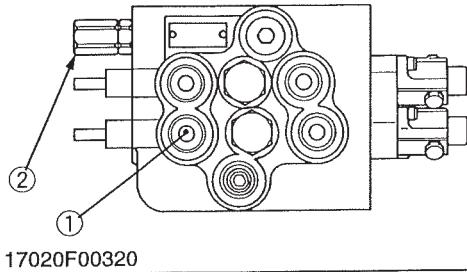


17020F00320


LA271 • LA301 • LA351

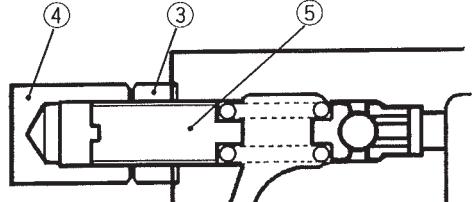

17020F00330

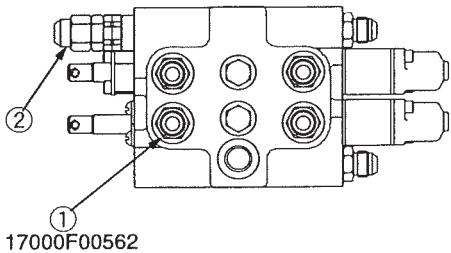NEW VALVE and LA401
LA272 • LA302 • LA352 • LA402

17000F00562

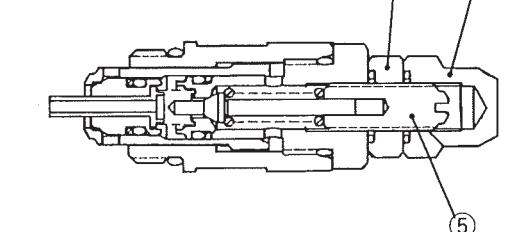NEW VALVE and LA401
LA272 • LA302 • LA352 • LA402

12210F00560

Relief Valve Setting Pressure

1. Remove the hose with quick coupler from the A2 port (1) of the control valve, and set a pressure gauge.
2. Start the engine, warm it up at an idle, and then set the engine speed at maximum.
3. Move the hydraulic control lever to “DUMP” position, and read the pressure gauge indication when a sound indicating the relief valve operation is heard.
4. If the pressure is not within the factory specifications, remove the acorn nut (4) and loosen the jam nut (3) then adjust by adjust screw (5).

Relief valve setting pressure	Factory spec.	LA271 / LA272 LA351 / LA352 LA401 / LA402	13.1 to 13.8 MPa 133.5 to 140.5 kgf/cm ² 1900 to 2000 psi
		LA301 / LA302	14.5 to 15.2 MPa 147.5 to 154.6 kgf/cm ² 2100 to 2200 psi

Condition

- Engine speedMaximum
- Oil temperature ...45 to 55 °C
113 to 131 °F

(1) A2 Port
(2) Relief Valve
(3) Jam Nut

(4) Acorn Nut
(5) Adjust Screw

17021S00040