


**"VIEW IS FROM BOTTOM OF THE TRACTOR"**

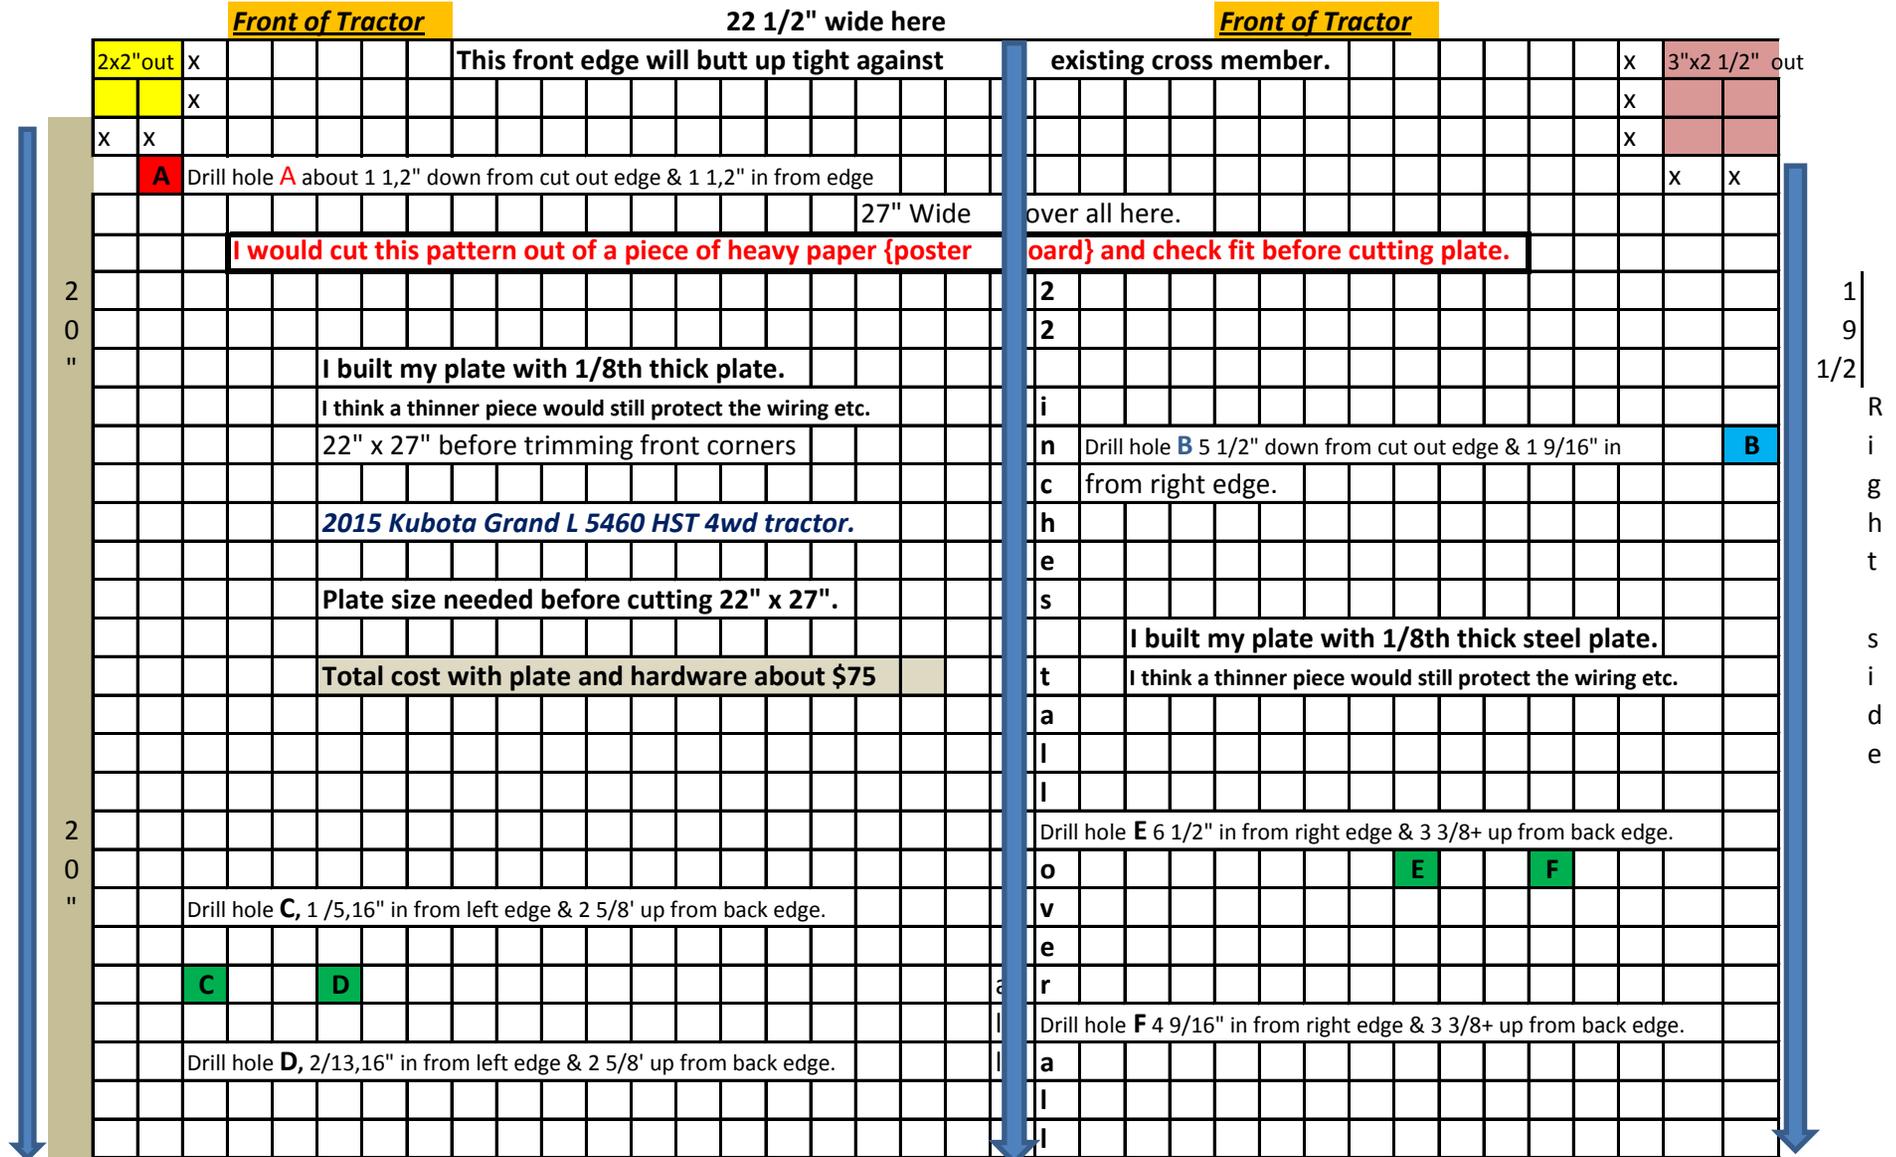

- C Drill 1/2 hole at green box locations. (CDEF)
- B Drill 1/2 hole at blue box for existing nut and bolt.
- A Drill 3/8 hole at red box location thru skid plate and existing plate for new 5/16 bolt.
- Cut this corner out 2 inch deep x 2 inch wide
- Cut this corner out 3 inch deep x 2 1/2 inch wide
- Replace existing 10m x 1 1/4 pitch bolt with new bolt about 1/4 inch longer depending on thickness of skid plate. (CDEF)
- 10 MM nuts are already welded in place. **Note 1 1/4 pitch (fine thread)**

**I would cut this pattern out of a piece of heavy paper {poster board} and check fit before cutting plate.**

**"VIEW IS FROM BOTTOM OF THE TRACTOR"**