



### 3. MOWER MOUNTING

- (1) Turn the front wheels to the left. Pull the mower under the vehicle from the left, then return the front wheels straight.

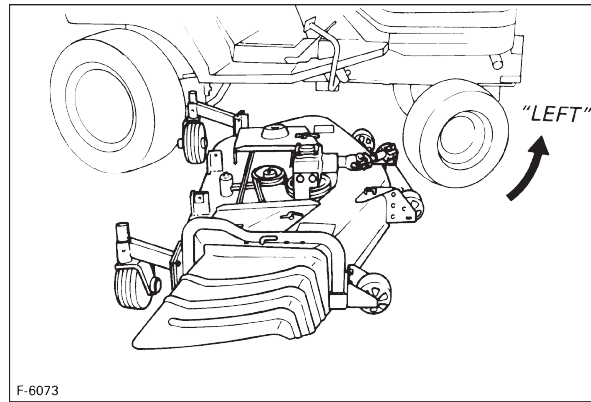

- (2) Attach the front links to the mower deck with clevis pins, plain washers and snap rings as illustrated.

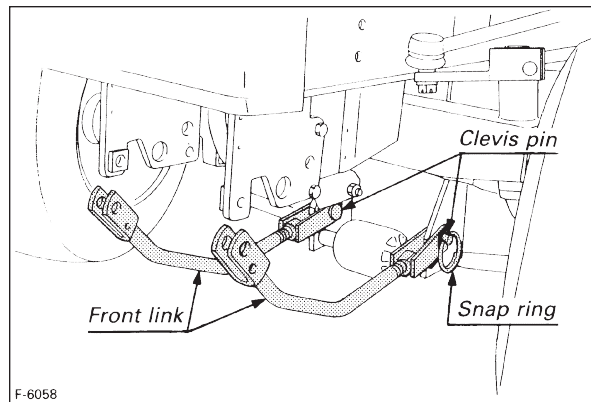

- (3) Mounting the universal joint.

**[RC48-G-2WS, RC48-G-4WS]**

Pull back coupler of universal joint.

Push the universal joint onto the PTO shaft until the coupler locks.

Slide the universal joint back and forth to make sure the universal joint is locked securely.

**IMPORTANT**

- Finally pull the universal joint to see if it is tight in position.

**[RC48-G20-CV]**

Slide the universal joint onto the front PTO shaft and secure it with the clevis pin, plain washer and and cotter pin.

**IMPORTANT**

- Spread the cotter pin completely.

