


[3] ENGINE KEY SWITCH SHUT-OFF SYSTEM

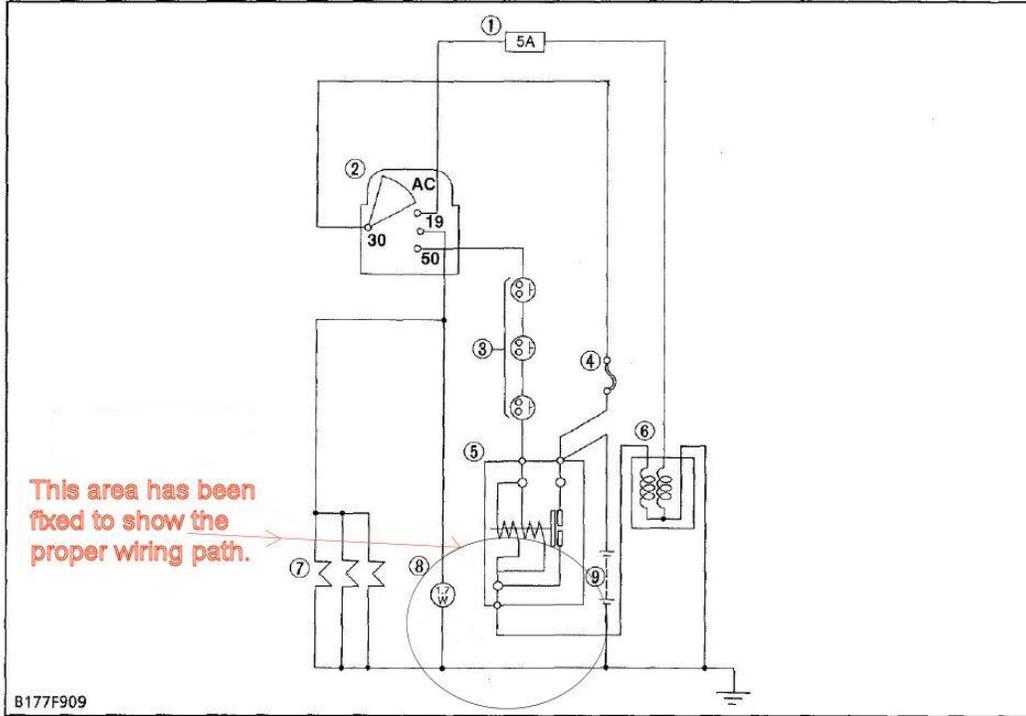


B177F909

- | | | | |
|---------------------|--------------------|---------------------------|-----------------------------|
| (1) Fuse | (4) Slow Blow Fuse | (6) Fuel Cut Off Solenoid | (8) Pre-heat Indicator Lamp |
| (2) Main Switch | (5) Starter Motor | (7) Glow Plugs | (9) Battery |
| (3) Safety Switches | | | |

On the engine key switch shut-off system, turning the main switch from the **ON** position to the **OFF** position moves the fuel injection pump control rack

to the "No Fuel Injection" position through the fuel cut off solenoid.

(1) Fuel Cut Off Solenoid

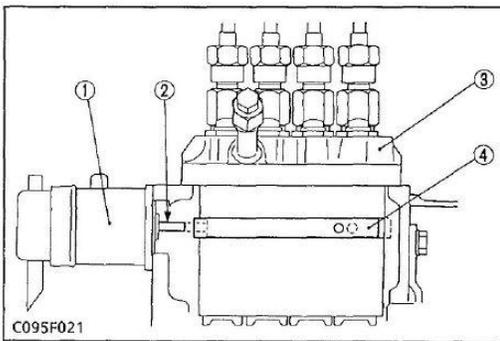

C095F021

Flowing of the battery current into the fuel cut off solenoid, the plunger (2) move to left side so that the movement of control rack (4) becomes free. When the battery current stops, the plunger (2) is returned to the original position by the spring to keep the control rack (4) in "No fuel injection" position.

- | | |
|---------------------------|--------------------|
| (1) Fuel Cut Off Solenoid | (3) Injection Pump |
| (2) Plunger | (4) Control Rack |